



# OPERATOR PRESENCE/SAFETY CIRCUIT

IS4000Z/D31 MAIN WIRE HARNESS  
46390

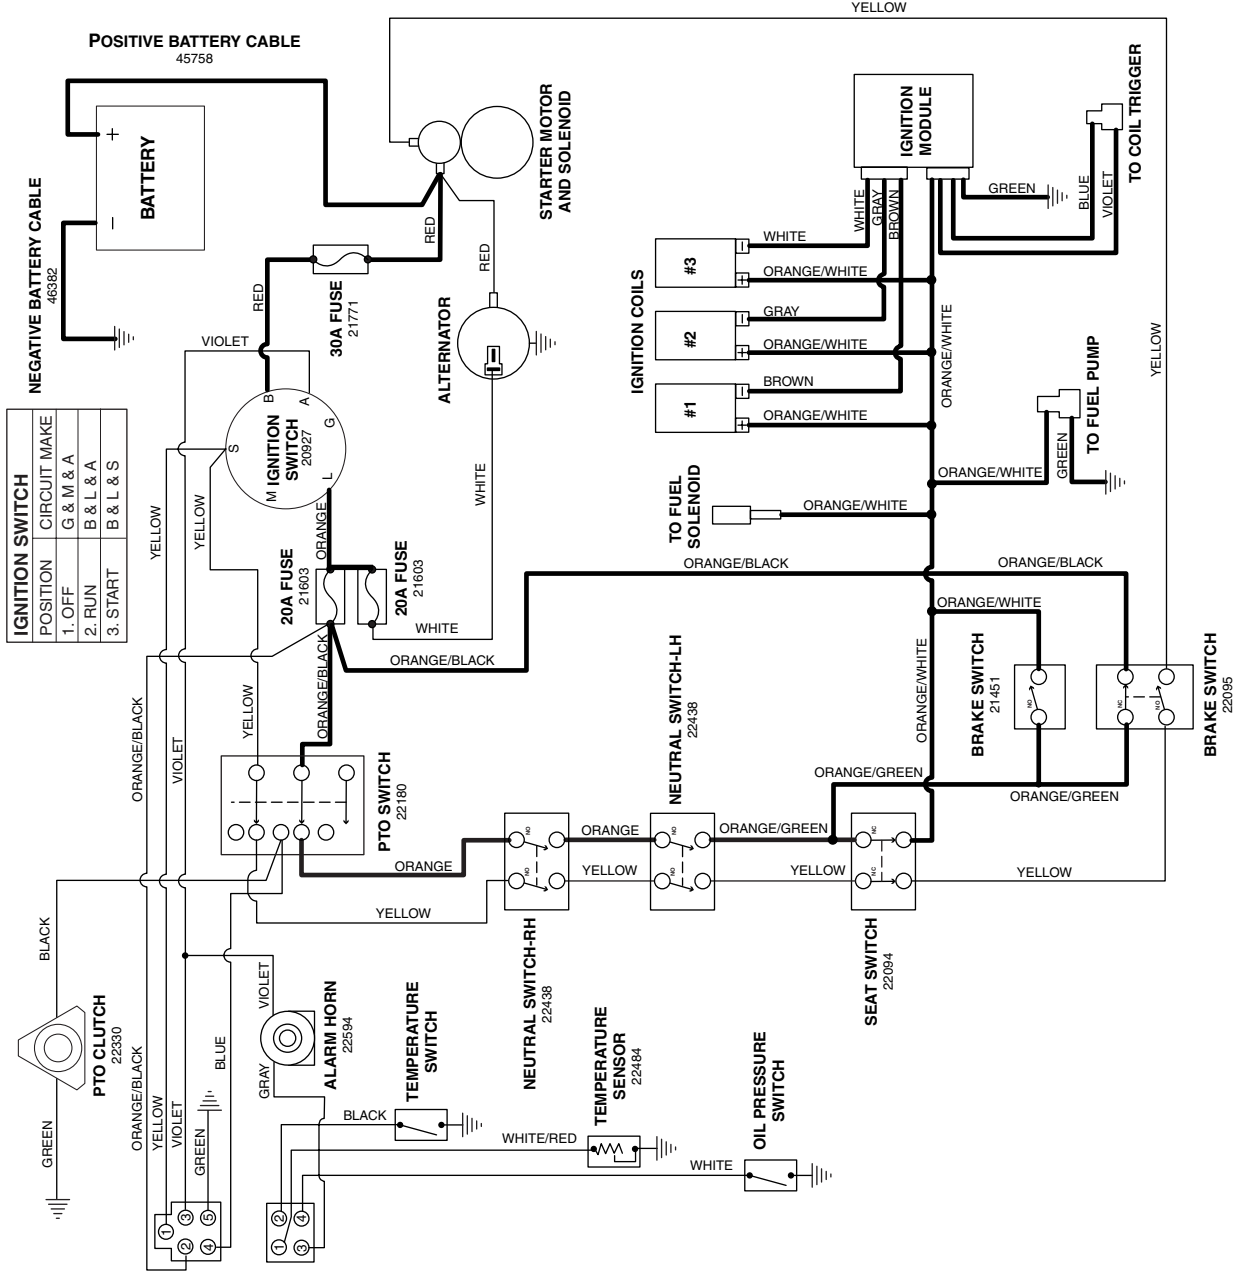


FOUR GAUGE WIRE HARNESS  
46410

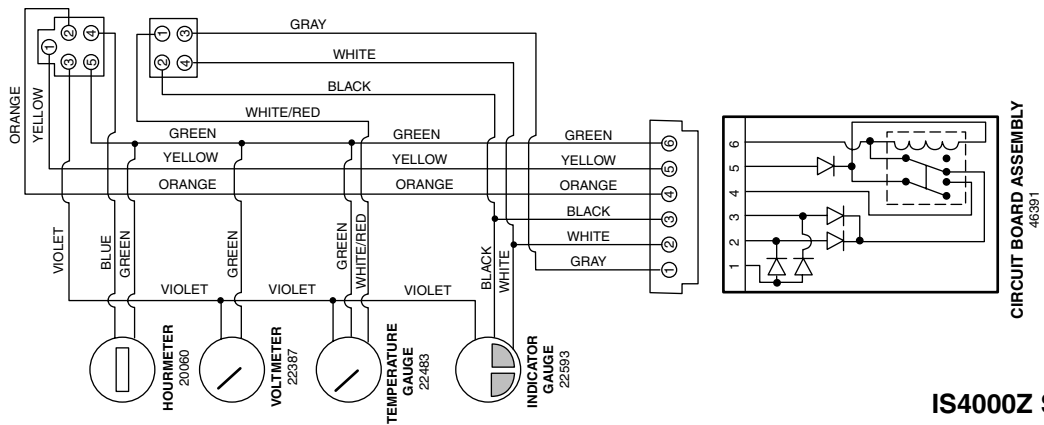


# CHARGING CIRCUIT

IS4000Z/D31 MAIN WIRE HARNESS  
46390

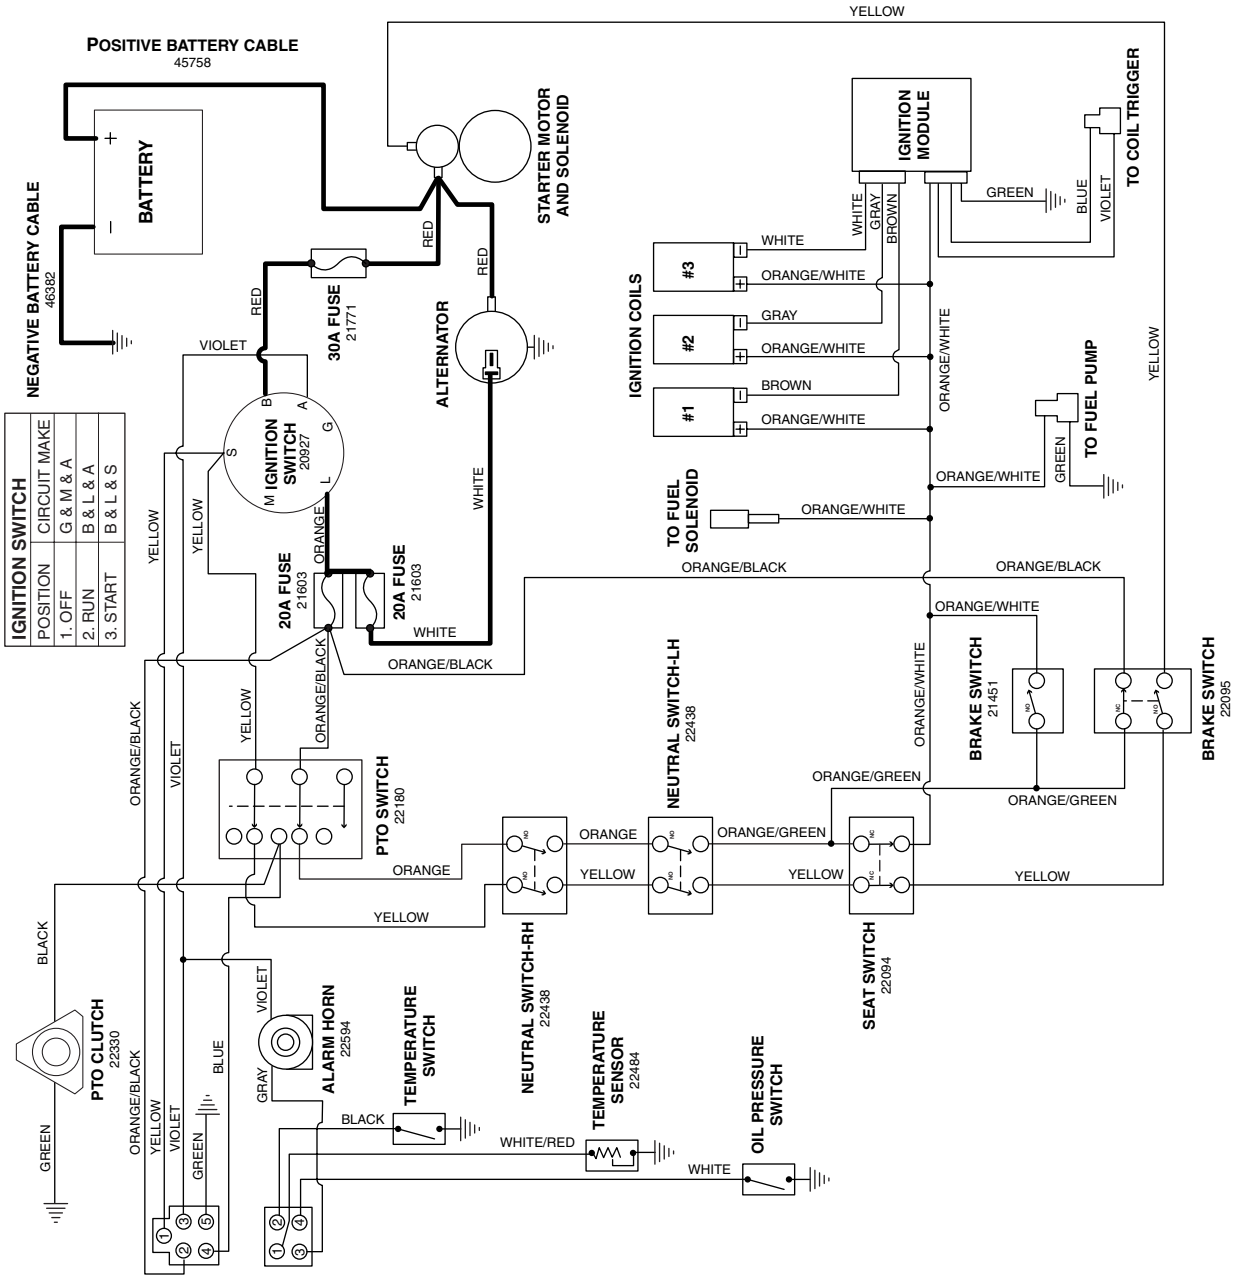


FOUR GAUGE WIRE HARNESS  
46410

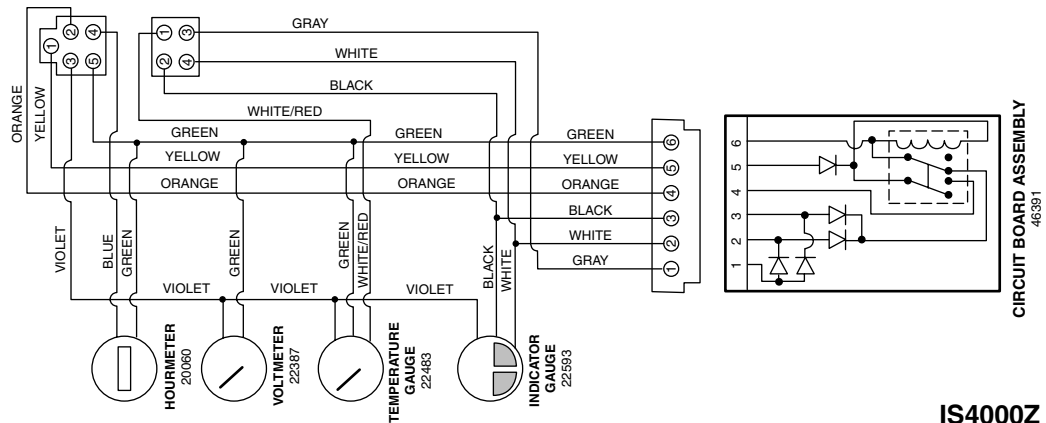


# CRANKING CIRCUIT

IS4000Z/D31 MAIN WIRE HARNESS  
46390

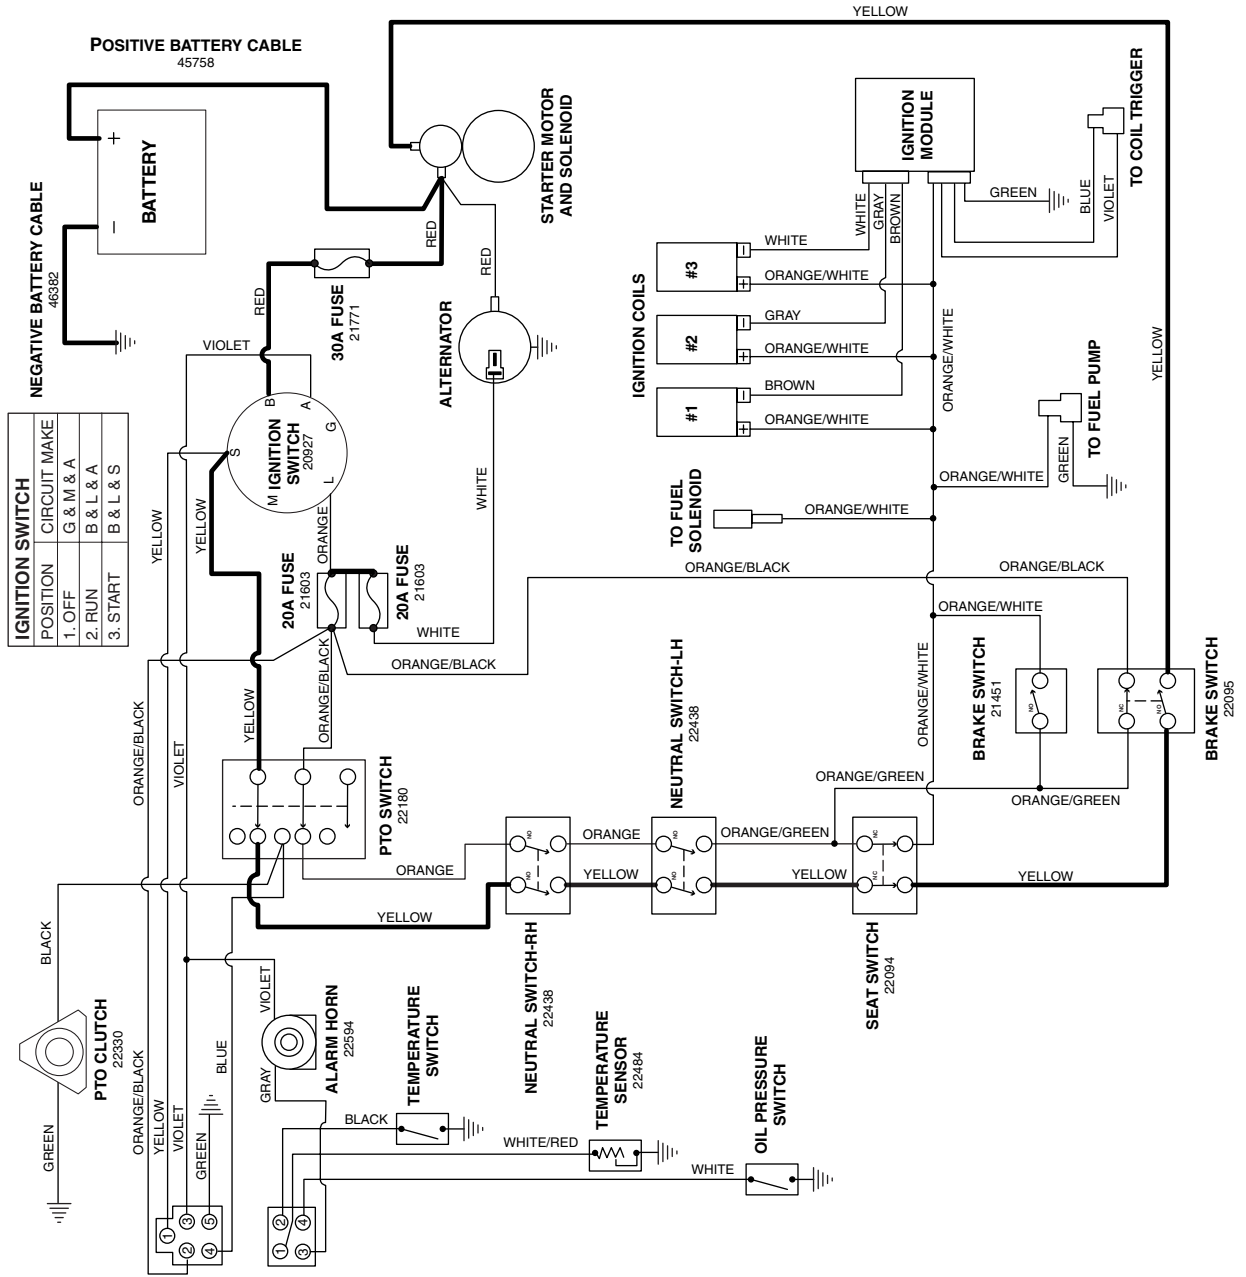


FOUR GAUGE WIRE HARNESS  
46410

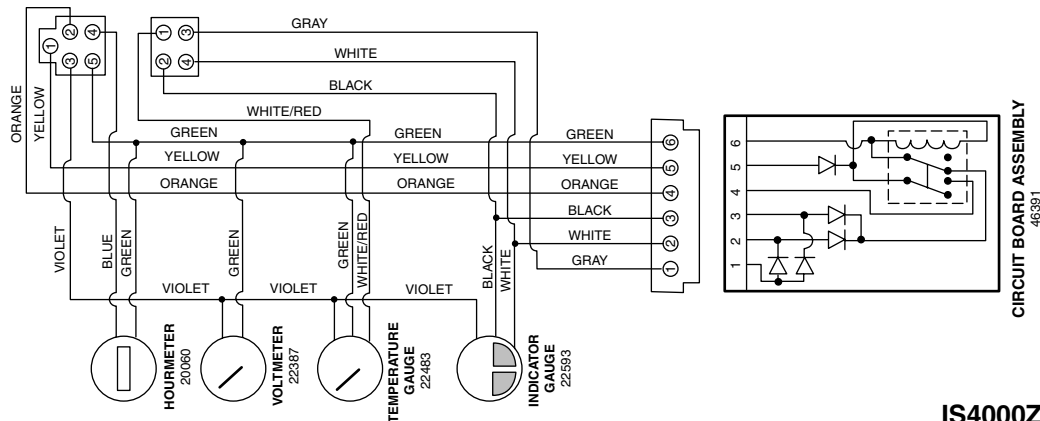


# PTO CLUTCH CIRCUIT

IS4000Z/D31 MAIN WIRE HARNESS  
46390

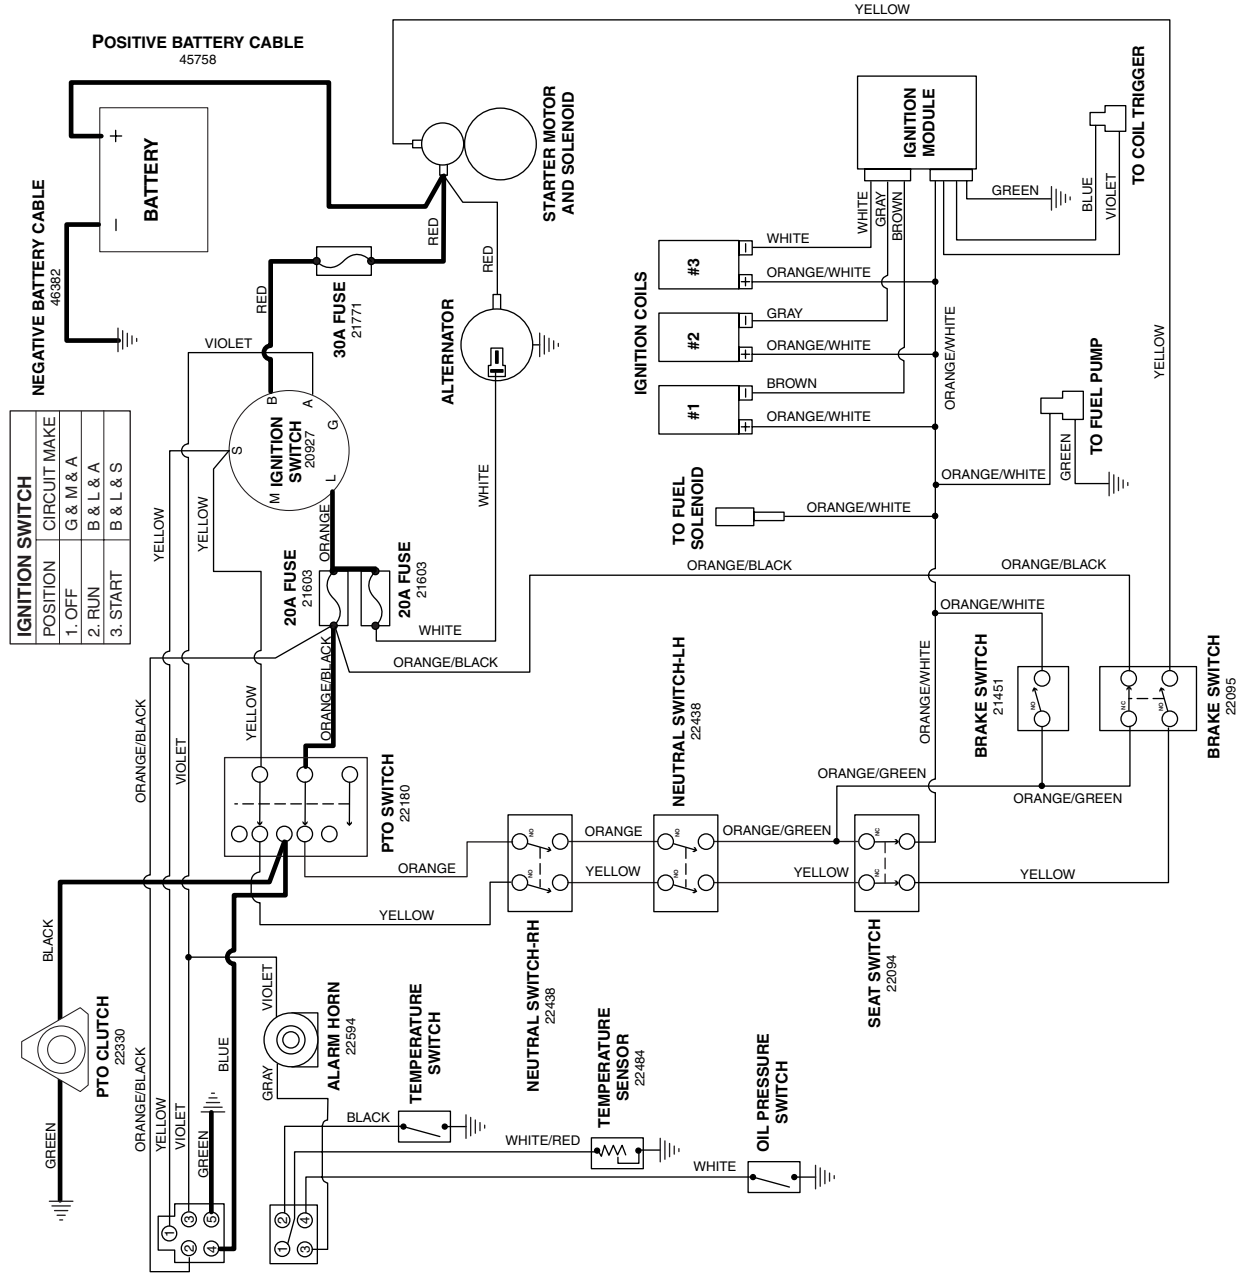

FOUR GAUGE WIRE HARNESS  
46410

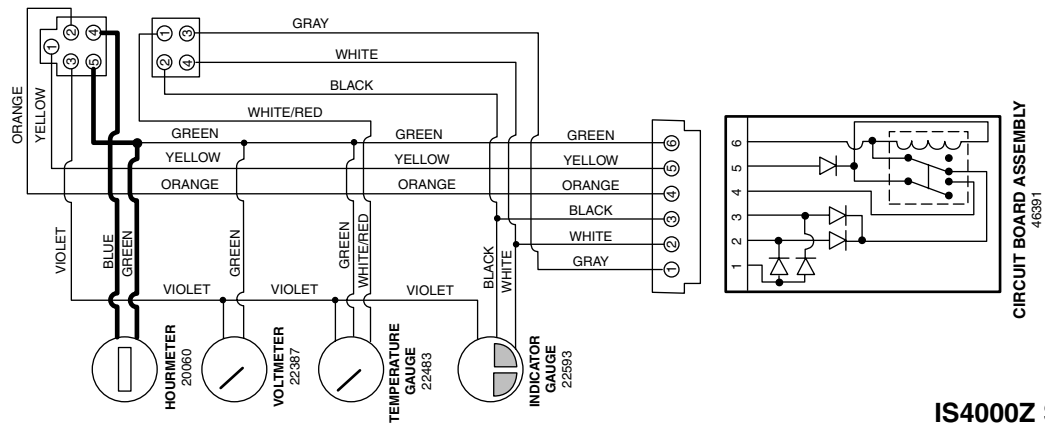

# GAUGES & ALARM CIRCUIT

