



# OPERATOR'S MANUAL IS2000Z Diesel Series

**Zero-Turn Riding Mower** 



Model Number:	Description
E00007	E ' 1000

5900627	Ferris IS2000ZY20D48, 20HP, 48" Cut Side Discharge Zero-Turn Riding Mower
5901192	Ferris IS2000ZY20D48R, 20HP, 48" Cut Rear Discharge Zero-Turn Riding Mower
5901191	Ferris IS2000ZY20D52, 20HP, 52" Cut Side Discharge Zero-Turn Riding Mower
5900628	Ferris IS2000ZY20D52R, 20HP, 52" Cut Rear Discharge Zero-Turn Riding Mower
5901187	Simplicity IS2000ZY20D48, 20HP, 48" Cut Side Discharge Zero-Turn Riding Mower
5901188	Simplicity IS2000ZY20D48R, 20HP, 48" Cut Rear Discharge Zero-Turn Riding Mower
5901189	Simplicity IS2000ZY20D52, 20HP, 52" Cut Side Discharge Zero-Turn Riding Mower
5901190	Simplicity IS2000ZY20D52R, 20HP, 52" Cut Rear Discharge Zero-Turn Riding Mower
5901190	, ,

**Thank you** for purchasing this quality-built product. We're pleased that you've placed your confidence in the Ferris and Simplicity brand. When operated and maintained according to the instructions in this manual, your product will provide many years of dependable service.

**This manual contains** safety information to make you aware of the hazards and risks associated with this machine and how to avoid them. This machine is designed and intended to be used and maintained according to the manual and operated by trained professionals for finish cutting of established lawns and is not intended for any other purpose. It is important that you read and understand these instructions thoroughly before attempting to start or operate this equipment

	EEEDENOE DATA			
PRODUCT R	EFERENCE DATA			
Number	Unit SERIAL Number			
Model Number	Mower Deck SERIAL Number			
3	Date Purchased			
ENGINE REFERENCE DATA				
re e	Engine Model			
/Spec.	Engine Code/Serial Number			
ENGINE RE	Date Purchased  FERENCE DATA  Engine Model			

See Page 11 for the location of Identification Numbers

DATE PURCHASED							

Briggs & Stratton Power Products Group, LLC. Copyright © 2008 Briggs & Stratton Corporation Milwaukee, WI, USA. All rights reserved.

The Ferris logo is a trademark of Briggs & Stratton Corporation Milwaukee, WI, USA.

Contact Information:

Briggs & Stratton Power Products Group, LLC. 5375 N. Main St.
Munnsville, NY 13409-4003
(800) 933-6175
www.ferrisindustries.com



Engine exhaust from this product contains chemicals known, in certain quantities, to cause cancer, birth defects, or other reproductive harm.

## **Table of Contents**

Operator Safety	2
Identification Numbers	
Safety Decals	
Safety Icons	
Safety Interlock System	.14
Features & Controls	15
Control Functions	.15
Operation	17
General	.17
Checks Before Starting	
Priming The Fuel System	
Starting the Engine	
Stopping the Rider	
Pushing the Rider by Hand	.19
Zero Turn Driving Practice	
Moving December detians	.22
Mowing Recommendations	
Mowing Methods Attaching a Trailer	24
Raise & Lower the Roll Bar	25
Storage	
Starting After Long Term Storage	26
Regular Maintenance	27
Maintenance Schedule	.27
Checking Tire Pressures	
Checking/Adding Fuel	.28
Fuel Filter	.28
Service Air Filter	
Check / Add / Change Engine Oil	
Check Hydraulic Oil Level	.32
Hydraulic Oil Filter Change	
Check Engine Coolant Level	
Change Engine CoolantClean Radiator & Screen	.33
Lubrication	
Battery Maintenance	
Servicing the Mower Blades	
Troubleshooting, Adjustments & Service	
Troubleshooting the Tractor	38
Troubleshooting the Mower	
Troubleshooting Common Cutting Problems	
Seat Adjustment	
Ground Speed Control Lever Adjustment	.41
Speed Balancing Adjustment	.41
Neutral Adjustment	.42
Return to Neutral Adjustment	
Parking Brake Adjustment	.43
Rear Suspension Adjustment	
Mowing Height Adjustment	
Foot Pedal Adjustment	
Deck Lift Rod Timing Adjustment  Deck Leveling Adjustment	.40 77
Deck Leveling Adjustment  Deck Lift Spring	
Hydraulic Pump Drive Belt Replacement	. <del>⊤</del> ≀ ⊿Ջ
Mower Belt Replacement	.49
Battery Service	.50
Specifications	
•	_

NOTE: In this manual, "left" and "right" are referred to as seen from the operating position.



## **Operating Safety**

Congratulations on purchasing a superior-quality piece of lawn and garden equipment. Our products are designed and manufactured to meet or exceed all industry standards for safety.

Do not operate this machine unless you have been trained. Reading and understanding this operator's manual is a way to train yourself.

Power equipment is only as safe as the operator. If it is misused, or not properly maintained, it can be dangerous! Remember, you are responsible for your safety and that of those around you.

Use common sense, and think through what you are doing. If you are not sure that the task you are about to perform can be safely done with the equipment you have chosen, ask a professional: contact your local authorized dealer.


## **Read the Manual**

The operator's manual contains important safety information you need to be aware of BEFORE you operate your unit as well as DURING operation.

Safe operating techniques, an explanation of the product's features and controls, and maintenance information is included to help you get the most out of your equipment investment.

Be sure to completely read the Safety Rules and Information found on the following pages. Also completely read the Operation section.



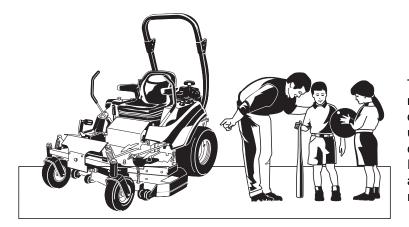

## Children

Tragic accidents can occur with children. Do not allow them anywhere near the area of operation. Children are often attracted to the unit and mowing activity. Never assume that children will remain where you last saw them. If there is a risk that children may enter the area where you are mowing, have another responsible adult watch them.



## **Slope Operation**

Operation on slopes can be dangerous. Using the unit on a slope that is too steep where you do not have adequate wheel traction (and control) can cause sliding, loss of steering, control, and possible rollover. You should not operate on a slope greater than a 5.4 foot rise over a 20 foot length (15 degrees).

Always mow across slopes, not up and down (to maintain traction on the wheels) and avoid sudden turns or rapid speed changes. Reduce speed and use extreme caution on ALL slopes.

Also, note that the surface condition you are on can greatly impact your ability to safely operate this machine. Operating on wet or slippery slopes can cause sliding and loss of steering and control. Do not operate on slopes that are slippery, wet, or have soft soil conditions.


If you feel unsure about operating the unit on a slope, don't do it. It's not worth the risk.


## **Thrown Objects**

This unit has spinning mower blades. These blades can pick up and throw debris that could seriously injure a bystander. Be sure to clean up the area to be mowed and remove objects that could be thrown by the blade BEFORE you start mowing.

Do not operate this unit without the entire grass catcher or discharge guard (deflector) in place.

Also, do not allow anyone in the area while the unit is running! If someone does enter the area, shut the unit off immediately until they leave.

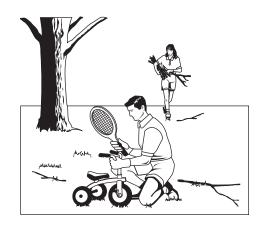

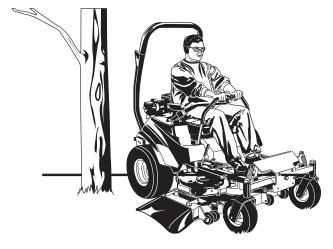

## **Moving Parts**

This equipment has many moving parts that can injure you or someone else. However, if you stay in the operator zone (stay seated in the seat), and follow the safety rules in this operator's manual, the unit is safe to operate.

The mower deck has spinning mower blades that can amputate hands and feet. Do not allow anyone near the unit while it is running! Keep safety devices (guards, shields, and switches) in place and working.

To help you, the operator, use this equipment safely, it is equipped with an operator-present safety system. Do NOT attempt to alter or bypass the system. See your dealer immediately if the system does not pass all the safety interlock system tests found in this manual.




## Retaining Walls, Dropoffs, and Water


Retaining walls and drop-offs around steps and water are a common hazard. Give yourself a minimum of two mower widths of clearance around these hazards and hand-trim with a walk behind mower or string trimmer. Wheels dropping over retaining walls, edges, ditches, embankments, or into water can cause rollovers, which may result in serious injury, death, or drowning.




Keep the roll bar in the raised position and fasten the seat belt. There is no roll over protection when the roll bar is down! Do not jump off if the mower tips (it is safer to be secured by the seat belt with the roll bar raised.)

Lower the roll bar only when necessary (such as to temporarily clear a low overhanging obstacle) and NEVER remove it. Do NOT use the seat belt when the roll bar is down. Raise the roll bar as soon as clearance permits.

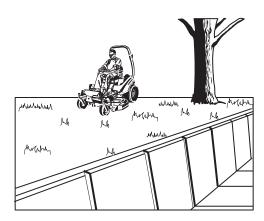

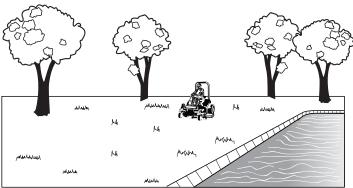

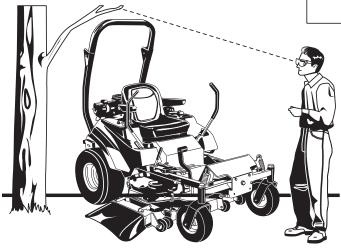

## **Overhead Obstacles**

Check for overhead clearances before driving under any objects. Do not allow the roll bar to contact low overhanging obstacles such as tree branches and guide wires.





## **Fuel and Maintenance**

Always disengage all drives, shutoff the engine, and remove the key before doing any cleaning, refueling, or servicing.

Gasoline and its vapors are extremely flammable. Do not smoke while operating or refueling. Do not add fuel while engine is hot or running. Allow engine to cool for at least 3 minutes prior to adding fuel.


Do not add fuel indoors, in an enclosed trailer, garage, or any other enclosed area that is not well ventilated. Gasoline spills should be cleaned up promptly and before operation begins.

Gasoline should be stored only in sealed containers approved for fuel.

Proper maintenance is critical to the safety and performance of your unit. Keep the unit free of grass, leaves, and excess oil. Be sure to perform the maintenance procedures listed in this manual, especially periodically testing the safety system.

## **Enclosed Areas**

Only operate this unit outdoors and away from unventilated areas such as inside garages or enclosed trailers. The engine emits poisonous carbon monoxide gas and prolonged exposure in an enclosed area can result in serious injury or death.

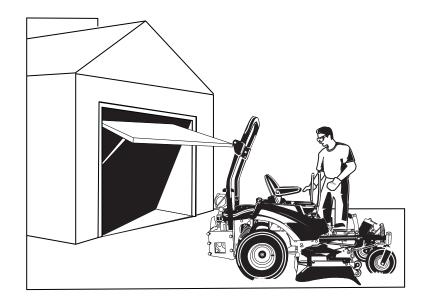



Read these safety rules and follow them closely. Failure to obey these rules could result in loss of control of unit, severe personal injury or death to you, or bystanders, or damage to property or equipment. This mowing deck is capable of amputating hands and feet and throwing objects. The triangle in text signifies important cautions or warnings which must be followed.

#### **TRAINING**

- Read, understand, and follow all instructions in the manual and on the unit before starting. If the operator(s) or mechanic(s) can not read English it is the owner's responsibility to explain this material to them.
- Become familiar with the safe operation of the equipment, operator controls, and safety signs.
- All operators and mechanics should be trained. The owner is responsible for training the users.
- Only allow responsible adults, who are familiar with the instructions, to operate the unit.
- Never let children or untrained people operate or service the equipment. Local regulations may restrict the age of the operator.
- The owner/user can prevent and is responsible for accidents or injuries occurring to themselves, other people or property.
- 7. Data indicates that operators, age 60 years and above, are involved in a large percentage of riding mower-related injuries. These operators should evaluate their ability to operate the riding mower safely enough to protect themselves and others from serious injury.

#### PREPARATION

- Evaluate the terrain to determine what accessories and attachments are needed to properly and safely perform the job. Use only accessories and attachments approved by the manufacturer.
- Wear appropriate clothing including safety shoes, safety glasses and ear protection. Long hair, loose clothing or jewelry may get tangled in moving parts.
- Inspect the area where the equipment is to be used and remove all objects such as rocks, toys and wire, which can be thrown by the machine.
- Use extra care when handling gasoline and other fuels. They are flammable and vapors are explosive.
  - a) Use only an approved container.
  - b) Never remove fuel cap or add fuel with the engine running. Allow engine to cool before refueling. Do not smoke.
  - c) Never refuel or drain the machine indoors.
- Check that operator's presence controls, safety switches and shields are attached and functioning properly. Do not operate unless they are functioning properly.

#### OPERATION

1. Never run an engine in an enclosed area.

- Mow only in the daylight or with good artificial light, keeping away from holes and hidden hazards.
- Be sure all drives are in neutral and parking brake is engaged before starting engine. Only start engine from the operator's position. Use seat belts if provided.
- Be sure of your footing while using pedestrian controlled equipment, especially when backing up. Walk, don't run. Reduced footing could cause slipping.
- Slow down and use extra care on hillsides. Be sure to travel in the recommended direction on hillsides. Turf conditions can affect the machines stability. Use caution when operating near dropoffs.
- Do not mow in reverse unless absolutely necessary. Always look down and behind before and while traveling in reverse.
- Be aware of the mower discharge direction and do not point it at anyone. Do not operate the mower without either the entire grass catcher or the deflector in place.
- 8. Slow down and use caution when making turns and when changing directions on slopes.
- Never raise deck with the blades running.
- 10. Never leave a running unit unattended. Always disengage the PTO, set parking brake, stop engine, and remove keys before dismounting. Keep hands and feet away from the cutting units.
- 11. Turn off the PTO switch to disengage the blades when not mowing.
- 12. Never operate with guards not securely in place. Be sure all interlocks are attached, adjusted properly and functioning properly.
- Never operate with the discharge deflector raised, removed or altered, unless using a grass catcher.
- 14. Do not change the engine governor setting or overspeed the engine.
- 15. Stop on level ground, lower implements, disengage drives, engage parking brake, shut off engine before leaving the operator's position for any reason including emptying the grass catchers or unclogging the chute.
- 16. Stop equipment and inspect blades after striking objects or abnormal vibration occurs. Make necessary repairs before resuming operations.
- 17. Keep hands and feet away from the cutting units.
- 18. Look behind and down before backing up to be sure of a clear path.
- Never carry passengers and keep pets and bystanders away.
- 20. Do not operate the unit while under the influence of alcohol or drugs.
- Slow down and use caution when making turns and crossing roads and sidewalks. Stop blades if not mowing.
- 22. Use care when loading or unloading the machine into a trailer or truck.

- 23. Use care when approaching blind corners, shrubs, trees or other objects that may obscure vision.
- 24. To reduce fire hazard, keep unit free of grass, leaves & excess oil. Do not stop or park over dry leaves, grass or combustible materials.
- 25. The engine in this unit is not factory equipped with a spark arrester. It is a violation of California Public Resource Code Section 4442 to use or operate the engine on or near any forest-covered, brush-covered, or grass-covered land unless the exhaust system is equipped with a spark arrester meeting any applicable local or state laws. Other states or federal area may have similar laws.
- 26. OSHA regulations may require the use of hearing protection when exposed to sound levels greater than 85 dBA for an 8 hour time period.

## **A** CAUTION



This machine produces sound levels in excess of 85 dBA at the operator's ear and can cause hearing loss though extended periods of exposure.

Wear hearing protection when operating this machine.

#### **SLOPE OPERATION**

Slopes are a major factor related to loss-of-control and tip-over accidents, which can result in severe injury or death. All slopes require extra caution. If you cannot back up the slope or if you feel uneasy on it, do not drive on it.

## **A** WARNING

Do not use this machine on slopes greater than 15° \*

Select slow ground speed before driving onto slope. Use extra caution when operating on slopes with rear-mounted grass catchers.

Mow across the face of slopes, not up and down, use caution when changing directions and DO NOT START OR STOP ON SLOPE.

#### Do

- 1. Mow across slopes, not up and down.
- 2. Remove obstacles such as rocks, tree limbs, etc.
- Watch for holes, ruts, or bumps. Uneven terrain could overturn the unit. Tall grass can hide obstacles.
- Use slow speed. Choose a slow speed so that you will not have to stop or change speed while on the slope.
- Use extra care with grass catchers or other attachments. These can change the stability of the unit.
- Keep all movement on the slopes slow and gradual. Do not make sudden changes in speed or direction.
- See your authorized dealer for recommendations of available weights to improve stability.

\*This limit was determined per CEN Standard EN 836:1997, Section 5.2.2 and is based on the EN 836 Stability Test procedure described in Section 4.2.4.2. The 15 degree "limit of stability" is equal to 50% of the angle at which machine lift-off occurred in static tests. Actual dynamic stability may vary depending on operating conditions.

#### Do Not

- Avoid starting, stopping, or turning on a slope. If tires lose traction (i.e. machine stops forward motion on a slope), disengage the blade(s) (PTO) and drive slow off the slope.
- Do not turn on slopes unless necessary, and then, turn slowly and gradually uphill, if possible. Never mow down slopes.
- Do not mow near drop-offs, ditches, or embankments. The operator could lose footing or balance or mower could suddenly turn over if a wheel is over the edge of a cliff or ditch, or if an edge caves in.
- Do not mow on wet grass. Reduced footing or traction could cause sliding.
- Do not try to stabilize the unit by putting your foot on the ground. (ride-on units)
- 6. Do not mow excessively steep slopes.
- Do not use grass catcher on steep slopes.
- 8. Do not mow slopes if you cannot back up them.

#### **TOWED EQUIPMENT (RIDE-ON UNITS)**

- Tow only with a machine that has a hitch designed for towing. Do not attach towed equipment except at the hitch point.
- Follow the manufacturer's recommendations for weight limit for towed equipment and towing on slopes. See attaching a trailer under OPERATION.
- Never allow children or others in or on towed equipment.
- On slopes, the weight of the towed equipment may cause loss of traction and loss of control.
- 5. Travel slowly and allow extra distance to stop.
- 6. Do not shift to neutral and coast down hill.

#### **CHILDREN**

Tragic accidents can occur if the operator is not alert to the presence of children. Children are often attracted to the unit and the mowing activity. Never assume that children will remain where you last saw them.

- Keep children out of the mowing area and under the watchful care of another responsible adult.
- 2. Be alert and turn unit off if children enter the area.
- 3. Before and during reverse operation, look behind and down for small children.
- 4. Never carry children, even with the blade(s) off. They may fall off and be seriously injured or interfere with safe unit operation. Children who have been given rides in the past may suddenly appear in the mowing area for another ride and be run over or backed over by the machine.
- 5. Never allow children to operate the unit.
- Use extra care when approaching blind corners, shrubs, trees, or other objects that may obscure vision.

#### **EMISSIONS**

- Engine exhaust from this product contains chemicals known, in certain quantities, to cause cancer, birth defects, or other reproductive harm.
- Look for the relevant Emissions Durability Period and Air Index information on the engine emissions label.

#### **IGNITION SYSTEM (GASOLINE MODELS)**

 This spark ignition system complies with Canadian ICES-002.

#### SERVICE AND MAINTENANCE

To avoid personal injury or property damage, use extreme care in handling gasoline. Gasoline is extremely flammable and the vapors are explosive.

#### Safe Handling of Gasoline

- Extinguish all cigarettes, cigars, pipes, and other sources of ignition.
- 2. Use only approved gasoline containers.
- Never remove the gas cap or add fuel with the engine running. Allow the engine to cool before refueling.
- 4. Never fuel the machine indoors.
- Never store the machine or fuel container where there is an open flame, spark, or pilot light such as near a water heater or other appliance.
- Never fill containers inside a vehicle or on a truck bed with a plastic bed liner. Always place containers on the ground away from your vehicle before filling.
- Remove gas-powered equipment from the truck or trailer and refuel it on the ground. If this is not possible, then refuel such equipment on a trailer with a portable container, rather than from a gasoline dispenser nozzle.
- Keep nozzle in contact with the rim of the fuel tank or container opening at all times until fueling is complete. Do not use a nozzle lock-open device.
- If fuel is spilled on clothing, change clothing immediately.
- Never over-fill the fuel tank. Replace gas cap and tighten securely.
- Use extra care in handling gasoline and other fuels. They are flammable and vapors are explosive.
- 12. If fuel is spilled, do not attempt to start the engine but move the machine away from the area of spillage and avoid creating any source of ignition until fuel vapors have dissipated.
- Replace all fuel tank caps and fuel container caps securely.

#### **Maintenance and Storage**

- Always observe safe refueling and fuel handling practices when refueling the unit after transportation or storage.
- Always follow the engine manual instructions for storage preparations before storing the unit for both short and long term periods.
- Always follow the engine manual instructions for proper start-up procedures when returning the unit to service.
- Never store the machine or fuel container inside where there is an open flame, such as in a water heater. Allow unit to cool before storing.
- 5. Shut off fuel while storing or transporting. Do not store fuel near flames or drain indoors.
- Keep all hardware, especially blade attachment bolts, tight and keep all parts in good working condition. Replace all worn or damaged decals.
- 7. Never tamper with safety devices. Check their proper operation regularly.

- Disengage drives, lower implement, set parking brake, stop engine and remove key or disconnect spark plug wire. Wait for all movement to stop before adjusting, cleaning or repairing.
- Clean grass and debris from cutting units, drives, mufflers, and engine to prevent fires. Clean up oil or fuel spillage.
- Let engine cool before storing and do not store near flame.
- 11. Stop and inspect the equipment if you strike an object. Repair, if necessary, before restarting.
- 12. Park machine on level ground. Never allow untrained personnel to service machine.
- 13. Use jack stands to support components when required.
- 14. Carefully release pressure from components with stored energy.
- 15. Disconnect battery or remove spark plug wire before making any repairs. Disconnect the negative terminal first and the positive last. Reconnect positive first and negative last.
- 16. Use care when checking blades. Wrap the blade(s) or wear gloves, and use caution when servicing them. Only replace blades. Never straighten or weld them.
- 17. Keep hands and feet away from moving parts. If possible, do not make adjustments with the engine running.
- 18. Charge batteries in an open well ventilated area, away from spark and flames. Unplug charger before connecting or disconnecting from battery. Wear protective clothes and use insulated tools.
- 19. Grass catcher components are subject to wear, damage, and deterioration, which could expose moving parts or allow objects to be thrown. Frequently check components and replace with manufacturer's recommended parts, when necessary.
- 20. Check brake operation frequently. Adjust and service as required.
- 21. Use only factory authorized replacement parts when making repairs.
- 22. Always comply with factory specifications on all settings and adjustments.
- Only authorized service locations should be utilized for major service and repair requirements.
- 24. Never attempt to make major repairs on this unit unless you have been properly trained. Improper service procedures can result in hazardous operation, equipment damage and voiding of manufacturer's warranty.
- 25. Units with hydraulic pumps, hoses, or motors: WARNING: Hydraulic fluid escaping under pressure may have sufficient force to penetrate skin and cause serious injury. If foreign fluid is injected into the skin it must be surgically removed within a few hours by a doctor familiar with this form of injury or gangrene may result. Keep body and hands away from pin holes or nozzles that eject hydraulic fluid under high pressure. Use paper or cardboard, and not hands, to search for leaks. Make sure all hydraulic fluid connections are tight and all hydraulic hoses and lines are in good condition before applying pressure to the system. If leaks occur, have the unit serviced immediately by your authorized dealer.
- 26. WARNING: Stored energy device. Improper release of springs can result in serious personal injury. Springs should be removed by an authorized technician.

27. Models equipped with an engine radiator: WARNING: Stored energy device. To prevent serious bodily injury from hot coolant or steam blow-out, never attempt to remove the radiator cap while the engine is running. Stop the engine and wait until it is cool. Even then, use extreme care when removing the cap.

#### **ROLL BAR INSTRUCTIONS**

For models equipped with factory-installed Roll Over Protection System (ROPS).

## **AWARNING**

In order to avoid serious injury or death from roll over, it is important to follow the warnings listed below.

#### **OPERATIONAL WARNINGS**

- Always use the seat belt when the roll bar is in the raised position.
- Never use the seat belt when the roll bar is in the down position.
- Remember there is no roll over protection when the roll bar is in the down position so it is very important to always keep the roll bar in the raised position whenever possible.
- Lower the roll bar to the down position only when it is absolutely necessary.
- Check for overhead clearances before driving under any objects. Do not allow roll bar to contact low overhanging obstacles such as tree branches and guide wires.
- Never remove the roll bar from the vehicle.
- Do not exceed the machine weight rating of the roll bar.
- Read and follow all of the instructions shown below regarding the inspection and maintenance of the roll bar structure and the seat belt.

## **WARNING**

Failure to properly inspect and maintain the ROLL BAR protective structure can cause serious injury or death.

## INSPECTION OF THE ROLL BAR PROTECTIVE STRUCTURE

A ROLL BAR, like any other safety device, needs to be periodically inspected to verify that the integrity of the device has not been compromised through normal machine use, misuse, age degradation, modifications, or a roll over.

To maintain operator roll over protection and roll bar effectiveness:

 If a ROLL BAR becomes damaged for any reason, such as a collision, roll over or impact, the ROLL BAR must be replaced. Small undetectable cracks can reduce the effectiveness of the ROLL BAR. Never weld, straighten, or repair the ROLL BAR.


- Never alter the ROLL BAR by welding anything to it or by drilling additional holes.
- BEFORE FIRST TIME USE Inspect the ROLL BAR structure and mounting hardware for:
- Check to make sure the machine GVW (Gross Vehicle Weight), including attachments, restrained payload, fuel and operator, is not in excess of the maximum weight specified on the ROLL BAR label.
- 2) Make sure there isn't any missing, damaged, or loose mounting hardware.
- 3) Make sure the ROLL BAR has been correctly and completely installed.
- EVERY 100 HOURS Inspect the ROLL BAR structure and mounting hardware for:
  - 1) Any cracks in the structure (structural members and/or welds).
  - Significant corrosion on any part of the ROLL BAR structure or hardware.
  - Missing, damaged, or loose mounting hardware
  - 4) Mounting hardware that is of a grade lesser than specified.
  - 5) Machine GVW (Gross Vehicle Weight), including attachments, restrained payload, fuel and operator, in excess of the maximum weight specified on the ROLL BAR label.
  - 6) Any modifications that have been made, such as unauthorized welds and holes.
  - 7) Any permanent deformation or twisting of the ROLL BAR structure.
  - 8) That the ROLL BAR label is still in place and is readable.
  - 9) That the ROLL BAR on-product warning labels are still on the ROLL BAR and are readable.
- If there is any doubt as to the condition of the ROLL BAR, remove the machine from service and contact your dealer for assistance.

## **AWARNING**


Failure to properly inspect and maintain the seat belt can cause serious injury or death.

## INSPECTION AND MAINTENANCE OF THE ROLL BAR SEAT BELT

- The seat belt like the ROLL BAR, needs to be periodically inspected to verify that the integrity has not been compromised through normal machine use, misuse, age degradation, modifications, or a roll over. If the seat belt does not pass all of the following tests, it should be replaced.
- BEFORE EACH USE Conduct the following inspections/maintenance of the seat belt and retraction mechanism:
  - Check for dirt or debris in the retraction mechanism. If dirt or debris is found, it should be removed.
  - 2) Check to make sure the retraction mechanism retracts easily and completely.
  - 3) Check for damage to any part of the seat belt such as nicks, cuts, loose stitching, or fraying.
  - 4) Check that the buckle and latch operate properly and that the latch plate is not excessively worn, deformed, or the buckle is damaged or cracked. The seat belt should latch and release easily.

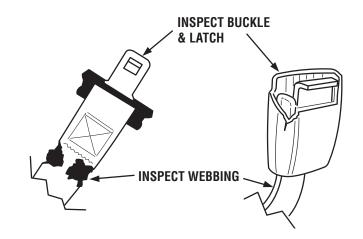

#### **IDENTIFICATION NUMBERS**

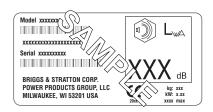

Tractor Identification Tag



Engine Identification Tag

When contacting your authorized dealer for replacement parts, service, or information you MUST have these numbers.

Record your model/serial number and engine serial numbers on the space provided for easy access. These numbers can be found in the locations shown in Figure 1.

#### CE IDENTIFICATION TAG MARKINGS

- A. Manufacturer's Identification Number
- B. Product Description
- C. Serial Number
- D. Manufacturer's Address
- E. CE Compliance Logo
- F. Year of Manufacture
- G. Maximum Engine Speed in Rotations per Minute
- H. Power Rating in Kilowatts
- I. Mass of Unit in Kilograms
- J. Sound Power in Decibels \*

This unit complies with European Harmonized Lawn Mower Standard EN 836, European Machinery Directive 98/37/EC, and European EMC Directive 89/336/EC

\* Tested according to 2000/14/EC


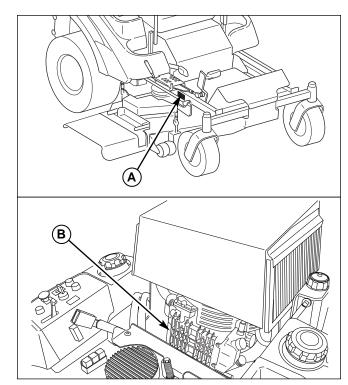


Figure 1. Identification Tag Locations
A. Tractor Identification Tag
B. Engine Identification Tag (Shown with cover removed)

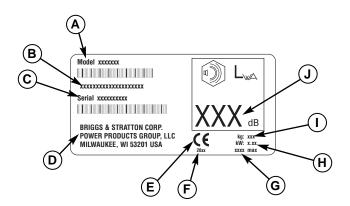

#### **SAFETY DECALS**


This unit has been designed and manufactured to provide you with the safety and reliability you would expect from an industry leader in outdoor power equipment manufacturing.


Although reading this manual and the safety instructions it contains will provide you with the necessary basic knowledge to operate this equipment safely and effectively, we have placed several safety labels on the unit to remind you of this important information while you are operating your unit.

All DANGER, WARNING, CAUTION and instructional messages on your rider and mower should be carefully read and obeyed. Personal bodily injury can result when these instructions are not followed. The information is for your safety and it is important! The safety decals on this page are on your rider and mower.

If any of these decals are lost or damaged, replace them at once. See your local dealer for replacements.

These labels are easily applied and will act as a constant visual reminder to you, and others who may use the equipment, to follow the safety instructions necessary for safe, effective operation.

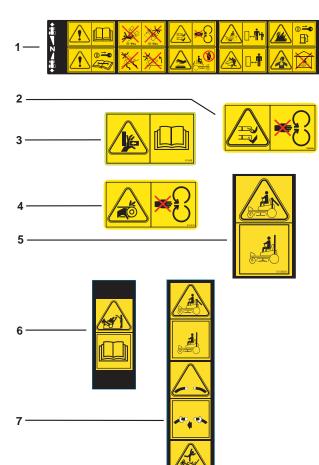

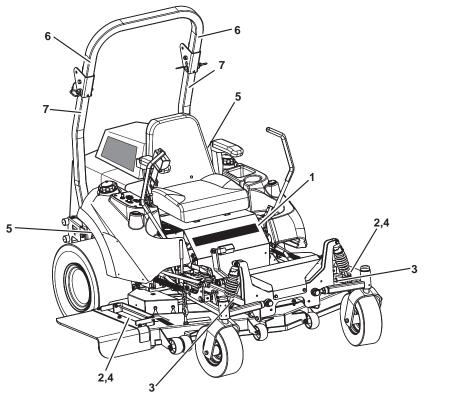

#### **SAFETY ICONS**

## Warning: Read Operator's Manual.

Read and understand the Operator's Manual before using this machine.



#### Danger: Thrown Objects.

This machine is capable of throwing objects and debris. Keep bystanders away.



## Warning: Remove Key Before Servicing.

Remove the key and consult technical literature before performing repairs or maintenance.



#### Danger: Machine Rollover.

Operating on steep slopes can cause sliding and loss of steering, control and rollover. Do not use



this machine on slopes greater than 15°. This limit was determined per CEN Standard EN 836:1997, Section 5.2.2 and is based on the EN 836 Stability Test procedure described in Section 4.2.4.2. The 15 degree "limit of stability" is equal to 50% of the angle at which machine lift-off occurred in static tests. Actual dynamic stability may vary depending on operating conditions.

#### Danger: Machine Rollover.

Do not operate on any slopes when wet or slippery. Do not operate near drop-offs or near water.



#### Danger: Dismemberment.

This machine can amputate limbs. Keep bystanders and children away when engine is running.



#### Danger: Dismemberment.

This mower deck can amputate limbs. Keep hands and feet away from blades.



#### Danger: Dismemberment.

This machine can crush and cut. Keep hands away from belts and pulleys.



#### Danger: Dismemberment.

This machine can crush and cut. Keep hands away from deck lift rod.



## Danger: Carbon Monoxide Poisoning.

Do not operate the engine in an unventilated area.



#### Warning: Avoid Serious Injury or Death from Roll Over

Keep roll bar in the raised position and use seat belt. Do NOT use seat belt when the roll bar is down.



## Warning: Avoid Serious Injury or Death from Roll Over

Keep roll bar in the raised position and use seat belt. There is no roll



over protection when roll bar is down. Lower roll bar only when necessary and NEVER remove it. Raise the roll bar as soon as clearance permits.

## Warning: Low Overhanging Obstacles Hazard

Check for overhead clearances before driving under any objects.



Stay clear. Do NOT allow roll bar to contact low overhanging obstacles, such as tree branches and guide wires. Read and follow all operating instructions and warnings in the operator's manual.


#### Danger: Fire Hazard.

Keep unit free of grass, leaves and excess oil. Do not add fuel while engine is hot or running. Stop



engine and allow to cool for at least 3 minutes prior to adding fuel. Do not add fuel indoors, in an enclosed trailer, garage, or other enclosed areas. Clean up spilled fuel. Do not smoke while operating this machine.

#### Warning: Avoid Serious Injury or Death from Roll Over

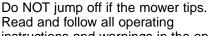



instructions and warnings in the operator's manual.

#### **Warning: Hot Surface**

Avoid contact with engine and hot surfaces. Wait for unit to cool before touching.





#### SAFETY INTERLOCK **SYSTEM**

This unit is equipped with safety interlock switches. These safety systems are present for your safety, do not attempt to bypass safety switches, and never tamper with safety devices. Check their operation regularly.

#### Operational SAFETY Checks

#### Test 1 — Engine should NOT crank if:

- PTO switch is engaged, OR
- Parking brake is not engaged, OR
- Motion control handles are not in the NEUTRAL position.

#### Test 2 — Engine SHOULD crank if:

- PTO switch is NOT engaged, AND
- · Parking brake is engaged, AND
- · Motion control handles are locked in the NEUTRAL position.

#### Test 3 — Engine should SHUT OFF if:

- Operator rises off seat with PTO engaged, OR
- · Operator rises off seat with parking brake disengaged.
- · Operator moves motion control handles out of their neutral positions before disengaging parking brake.

#### Test 4 — Blade Brake Check


Mower blades and mower drive belt should come to a complete stop within seven (7) seconds after electric PTO switch is turned off (or operator rises off seat). If mower drive belt does not stop within seven (7) seconds, see your dealer.

NOTE: Once the engine has stopped, PTO switch must be turned off, parking brake must be engaged, and the motion control handles must be locked in the NEUTRAL position after the operator returns to the seat in order to start the engine.

#### **MARNING**

If the unit does not pass a safety test, do not operate it. See your authorized dealer. Under no circumstance should you attempt to defeat the purpose of the safety interlock system.

#### **FEATURES AND CONTROLS**

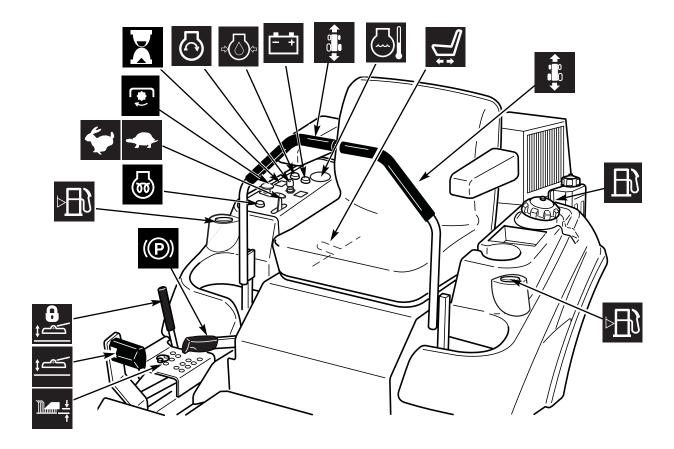

#### **CONTROL FUNCTIONS**

The information below briefly describes the function of individual controls. Starting, stopping, driving, and mowing require the combined use of several controls applied in specific sequences. To learn what combination and sequence of controls to use for various tasks see the OPERATION section.



#### **Ground Speed Levers**

These levers control the ground speed of the rider. The left lever controls the left rear drive wheel and the right lever controls the right rear drive wheel.

Moving a lever forward increases the FORWARD speed of the associated wheel, and pulling back on a lever increases the REVERSE speed.

Note: The further a lever is moved away from the neutral position the faster the drive wheel will turn.

See the Operating the Zero Turn Rider section for steering instructions.



#### Seat Adjustment Lever

The seat can be adjusted forward and back. Move the lever towards the left, position the seat as desired, and release the lever to lock the seat in position.



#### Ignition Switch

The ignition switch starts and stops the engine, it has four positions:

**⊚** 

Heats the glow plugs.

O 🕞

Stops the engine and shuts off the electrical system.

Allows the engine to run, powers the electrical system and primes the fuel system

 $\odot$ 

Cranks the engine for starting.

NOTE: Never leave the ignition switch in the ON position with the engine stopped—this drains the battery.



#### PTO (Power Take Off) Switch

The PTO switch engages and disengages the mower. Pull UP on the switch to engage the mower, and push DOWN to disengage the mower.



#### **Throttle Control**

Moving the throttle control fully forward is FULL throttle position. Always operate the unit at FULL throttle when mowing.



#### **Parking Brake**



DISENGAGE Releases the parking brake.



**ENGAGE** Locks the parking brake.

Pull the parking brake lever back to engage the parking brake. Move the lever fully forward to disengage the parking brake. NOTE: To start the unit the parking brake must be engaged.



## **Deck Lift Pedal, Cutting** Height Adjustment Pin & Deck Lift Lock

These control the cutting height of the mower deck. Depress the pedal until it locks into the 6" (15,2 cm) position. Place the adjustment pin in the desired cutting height and release the lift lock lever.



#### **Hour Meter / Maintenance Reminder**

Measures the time of the PTO being engaged. The hour meter measures the number of hours the PTO has been engaged. The hour meter will flash an initial oil change indicator at 5 hours, and a lubrication reminder every 50 hours. These reminders display for approximately two hours and will automatically reset themselves.

Note: The hour meter will register the passage of time only when the PTO is engaged. The hour meter has a self contained power source so the total hours are always visible.



#### Glow Plug Indicator

Lamp that indicates that the glow plugs are heating. Hold the ignition key in the "HEAT" position until indicator lamp turns off, then turn the key to start.



#### **Voltage Gauge**

Gauge measures the output voltage of the engine charging system.



#### **Oil Pressure Indicator**

Lamp that indicates a low oil pressure condition.



#### Water Temperature Gauge

Gauge measures the engine coolant temperature.



#### **Fuel Tank Cap**

To remove the cap, turn counterclockwise.



#### **Fuel Level Gauge**

Displays the fuel level in the tank.

#### GENERAL OPERATING SAFETY

Before first time operation:

- · Be sure to read all information in the Safety and Operation sections before attempting to operate this tractor and mower.
- · Become familiar with all of the controls and how to stop the unit.
- Drive in an open area without moving to become accustomed to the unit.

## **▲** WARNING

Do not use this machine on slopes greater than 15 degrees.

Select slow ground speed before driving onto a slope. Use extra caution when operating on slopes with a rear-mounted grass catcher.

Mow across the face of slopes, not up and down, use caution when changing directions and DO NOT START OR STOP ON SLOPE.

## WARNING

Never allow passengers to ride on the unit. Before leaving the operator's position for any reason, engage the parking brake, disengage the PTO, stop the engine and remove the key.

To reduce fire hazard, keep the engine, tractor and mower free of grass, leaves and excess grease. Do not stop or park tractor over dry leaves, grass or combustible materials.

Gasoline is highly flammable and must be handled with care. Never fill the tank when the engine is still hot from recent operation. Do not allow open flame, smoking or matches in the area. Avoid over-filling and wipe up any spills.

#### CHECKS BEFORE STARTING

- · Check that crankcase is filled to full mark on dipstick. See the engine Operators Manual for instructions and oil recommendations.
- Check the radiator fluid level. See engine operator's manual for instructions.
- · Check the hydraulic oil level. Refer to REGULAR MAINTENANCE section.
- · Make sure all nuts, bolts, screws and pins are in place and tight.
- Adjust the seat position, and make certain you can reach all controls from the operators position.
- Fill the fuel tanks with fresh fuel. Refer to engine manual for fuel recommendations.



#### WARNING

Do not load this zero-turn rider on a trailer or truck using two separate ramps. Only use a single ramp that is at least one foot wider than the width of the rear wheels of this rider. This rider has a zero turning radius and the rear wheels could fall off the ramps, or the rider could tip over injuring the operator or bystanders.



#### PRIMING THE FUEL SYSTEM

Priming the fuel system removes any air bubbles from the fuel system.

## **AWARNING**

Fuel leaked or spilled onto hot surfaces or electrical components can cause a fire. To help prevent possible injury, turn the ignition switch off when changing fuel filter or water separator element. Clean up fuel spills immediately.

The fuel system would only need to be primed under the following conditions:

- Before starting the engine for the first time.
- After running the machine out of fuel and fresh fuel has been added to the fuel tanks.
- After performing maintenance on the fuel system, such as changing the fuel filter or replacing a fuel system component.

#### To prime the fuel system:

- Make sure that there is fuel in the fuel tanks and that both fuel tank shut off valves (A, Figure 2) are open.
- Turn the key to the ON position (not the start position). The electric fuel pump feeds fuel to the system.
- 3. When the fuel filter (A, Figure 3) is free of air bubbles the engine is ready to start.

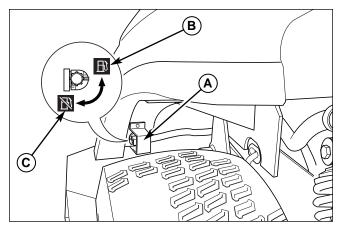


Figure 2. Fuel Shut Off Valve A. Fuel Shut Off Valve Location

- **B.** Open Position
- C. Closed Position

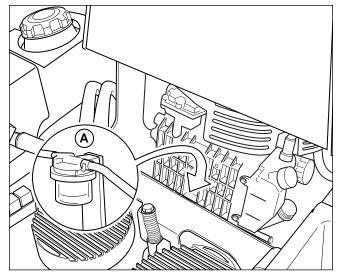


Figure 3. Fuel System Priming A. Fuel Filter

## **WARNING**

If you do not understand how a specific control functions, or have not yet thoroughly read the FEATURES & CONTROLS section, do so now.

Do NOT attempt to operate the tractor without first becoming familiar with the location and function of ALL controls.

#### STARTING THE ENGINE

- While sitting in the operators seat, engage the parking brake, make sure the PTO switch is disengaged, and the ground speed control levers are locked in the neutral position.
- 2. Set the throttle to middle position (set throttle to FULL when starting in cold weather)
- 3. Turn the key to the HEAT position. Hold the key to turn the glow plug indicator light on and activate the glow plugs.
- Wait until the glow plug indicator light turns off, then turn the key to START. If the engine does not start immediately, move the throttle control to FULL.

NOTE: Do not crank the engine continuously for more than 30 seconds. Allow the starter motor to cool for two minutes before cranking the engine again.

- 5. After the engine starts, move the engine throttle control to SLOW. Warm up the engine by running it for at least a minute.
- 6. Move the throttle to FULL before engaging the PTO switch or driving the machine.

In the event of an emergency the engine can be stopped by simply turning the ignition switch to STOP. Use this method only in emergency situations. For normal engine shut down follow the procedure given in STOPPING THE TRACTOR.

# STOPPING THE TRACTOR & ENGINE

- 1. Returning the ground speed control levers to the middle position will stop tractor movement. Pivot the levers outward and lock them in neutral.
- 2. Disengage the PTO.
- 3. Engage the parking brake.
- 4. Move the throttle control to SLOW and allow the engine to cool down for a short time.
- 5. Turn the ignition key to OFF. Remove the key.

#### PUSHING THE RIDER BY HAND

# 0

#### DO NOT TOW RIDER

Towing the unit will cause hydraulic pump and wheel motor damage. Do not use another vehicle to push or pull this unit.

- 1. Disengage the PTO, engage the parking brake, turn the ignition OFF, and remove the key.
- 2. Lift the seat plate to gain access to the hydraulic pumps.
- To disengage the pumps (free-wheel position), turn the hydraulic release valves (A, Figure 4) located on the pumps COUNTER-CLOCKWISE a maximum of 2 full turns.
- 4. Disengage the parking brake. The tractor can now be pushed by hand.
- After moving the tractor, re-engage the pumps (drive position) by turning the release valves CLOCKWISE and tighten to 80-120 in. lbs. of torque.

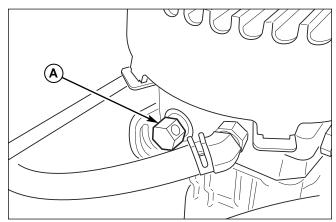


Figure 4. Hydraulic System By-Pass
A. Hydraulic Release Valve
(left-hand pump shown)

## ZERO TURN DRIVING PRACTICE

The lever controls of the Zero Turn rider are responsive. Learning how to gain smooth, efficient control of the rider's forward, reverse, and turning movements will take some practice.

Spending some time practicing the maneuvers shown and becoming familiar with how the unit accelerates, travels, and steers — before you begin mowing — is absolutely essential to getting the most out of the Zero Turn rider.

Locate a smooth, flat area of your lawn — one with plenty of room to maneuver. (Clear the area of objects, people and animals before you begin.) Operate the unit at mid-throttle during this practice session (ALWAYS operate at full throttle when mowing), and turn slowly to prevent tire slippage and damage to your lawn.

We suggest you begin with the Smooth Travel procedure to the right, and then advance through the forward, reverse, and turning maneuvers.

You must release the parking brake prior to moving the control levers inward.

#### **Smooth Travel**

The lever controls of the Zero Turn rider are responsive.

The BEST method of handling the ground speed control levers is in three steps — as shown in Figure 5.

FIRST place your hands onto the levers as shown.

SECOND, to go forward gradually push the levers forward with your palms.

THIRD, to speed up move the levers farther forward. To slow down smoothly, slowly move the levers toward neutral.

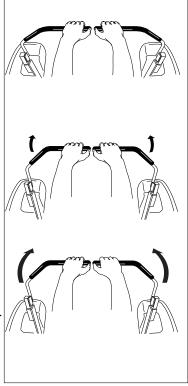


Figure 5. Move Control Levers Gradually

#### **BASIC DRIVING**

#### **Forward Travel Practice**

Gradually move both ground speed control levers evenly FORWARD from neutral. Slow down and repeat.

NOTE: Straight forward travel takes practice. If necessary, top speed can be balance-adjusted — see the Speed Balancing Adjustment in the Adjustments section near the back of this manual.

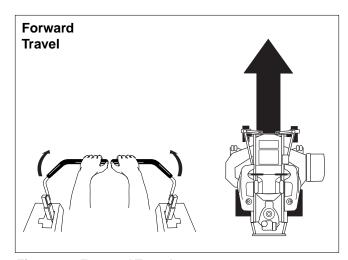


Figure 6. Forward Travel

#### **Reverse Travel Practice**

LOOK DOWN and BEHIND, then gradually move both ground speed control levers evenly BACK from neutral. Slow down and repeat.

NOTE: Practice backing up for several minutes before attempting to do so near objects. The rider turns sharply in reverse as well as forward, and backing up straight takes practice.

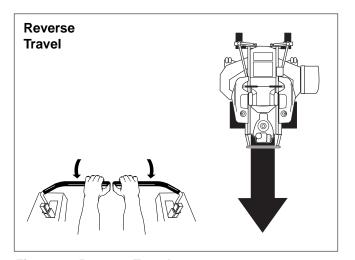


Figure 7. Reverse Travel

#### **Practice Turning Around a Corner**

While traveling forward allow one handle to gradually return back toward neutral. Repeat several times.

NOTE: To prevent pivoting directly on the tire tread, it is best to keep both wheels going at least slightly forward.

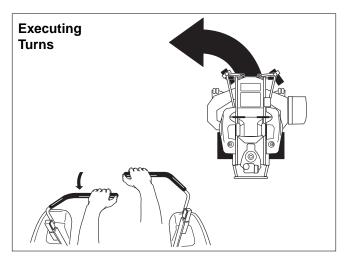


Figure 8. Turning Around a Corner

#### **Practice Turning In Place**

To turn in place, "Zero Turn," gradually move one ground speed control lever forward from neutral and the other lever back from neutral simultaneously. Repeat several times.

NOTE: Changing the amount each lever is pulled forward or back, changes the "pivot point" you turn on.

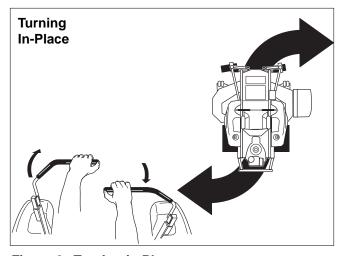


Figure 9. Turning in Place

#### ADVANCED DRIVING \_

## Executing an End-Of-Row Zero Turn

Your Zero Turn Rider's unique ability to turn in place allows you to turn around at the end of a cutting row, rather than having to stop and Y-turn before starting a new row.

For example, to execute a left end-of row zero turn:

- 1. Slow down at the end of the row.
- Move the RIGHT ground speed control lever forward slightly while moving the LEFT ground speed control lever back to center and then slightly back from center.
- 3. Begin mowing forward again.

This technique turns the rider LEFT and slightly overlaps the row just cut eliminating the need to back up and re-cut missed grass.

As you become more familiar and experienced with operating the Zero Turn rider. You will learn more maneuvers that will make your mowing time easier and more enjoyable.

Remember, the more you practice, the better your control of the Zero Turn will be!

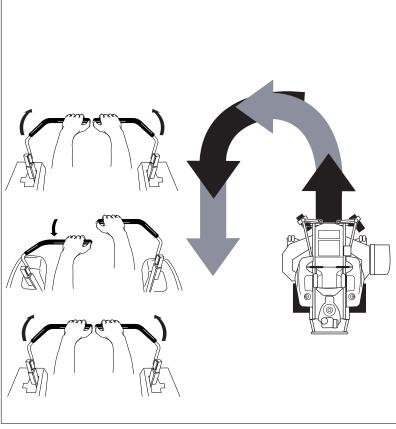


Figure 10. Executing an End-Of-Row Turn

#### **MOWING**

- Engage the parking brake. Make sure the PTO switch is disengaged, the motion control levers are locked in the NEUTRAL position, and the operator is on the seat.
- 2. Start the engine (see STARTING THE ENGINE).
- 3. Set the mower cutting height.
- 4. Set the throttle to FULL.
- 5. Engage the PTO by pulling up on the PTO switch.
- 6. Begin mowing.
- 7. When finished, shut off the PTO.
- 8. Stop the engine (see STOPPING THE TRACTOR AND ENGINE).

#### MOWING RECOMMENDATIONS

Several factors can affect how well your machine cuts grass. Following proper mowing recommendations can improve the performance and life of your machine.

#### **Height of Grass**

Often cutting height is a matter of personal preference. Typically, you should mow the grass when it is is between three and five inches high. The proper cutting height range for a specific lawn will depend upon several factors including the following: the type of grass, the amount of rainfall, the prevailing temperature, and the lawn's overall condition.

Cutting the grass too short causes weak, thin grass plants, which are easily damaged by dry periods and pests. Cutting too short is often more damaging than allowing the grass to be slightly higher.

Letting grass grow a bit longer especially when it is hot and dry reduces heat build-up, preserves needed moisture, protects the grass from heat damage and other problems. However, allowing grass to grow too high can cause thin turf and additional problems.

Cutting off too much at one time shocks the plant's growth system and weakens the grass plants. A good rule of thumb is the 1/3 rule: to cut no more than one third of the grass height, and never more than 1 inch at a time.

The amount of grass you are able to cut in one pass is also effected by the type of mowing system you are using (for example, broadcasting with side discharge decks can process a much larger volume of grass than mulching does).





Figure 11. Proper Cutting Height

#### **Tall Grass Requires Incremental Cutting**

For extremely tall grass, set the cutting height at maximum for the first pass, and then reset it to the desired height and mow a second or third time.

Don't cover the grass surface with a heavy layer of clippings. Consider using a grass collection system and starting a compost pile.

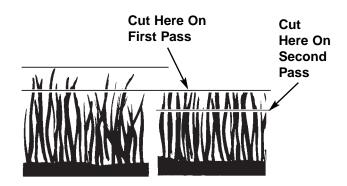


Figure 12. Incremental Cutting

#### When and How Often to Mow

The time of day and condition of the grass greatly affect the results you'll get when mowing. For the best results, follow these guidelines:


- 1. Mow when the grass is between three and five inches high.
- Mow with sharp blades. Short clippings of grass one inch or shorter decompose more quickly than longer blades. Sharp mower blades cut grass cleanly and efficiently, preventing frayed edges which harm the grass.
- 3. Mow at time of day when the grass is cool and dry. Late afternoon or early evening often provide these ideal mowing conditions.
- Avoid mowing after rain or even heavy dew. Never mulch when the grass is wet (moist grass does not mulch well and clumps beneath the mower deck).

#### **Mowing Patterns**


Always start mowing on a smooth, level area.

The size and type of area to be mowed will determine the best mowing pattern to use. Obstructions such as trees, fences, buildings, and conditions such as slopes and grades must also be considered.

- 1. Cut long straight strips overlapping slightly.
- 2. Whenever possible, change patterns to eliminate matting, graining, or a corrugated appearance.
- For a truly professional cut, mow across the lawn in one direction, then recut the lawn by mowing perpendicular to the previous cut.

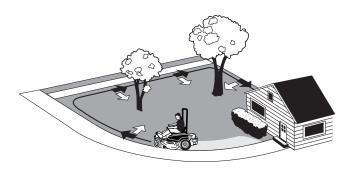

Where possible, make one or two passes around the outside of the area discharging the grass INTO the lawn to keep the cut grass off fences and walks.

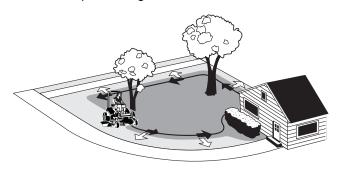

The remainder of the mowing should be done in the opposite direction so that the clippings are dispersed OUT onto the area of lawn previously cut.

#### **MOWING METHODS**

#### **Proper Broadcast Mowing**

Broadcasting (side discharging), disperses fine clippings evenly over the entire lawn. Many golf courses use this method. Your mower has a deep dish deck to allow freer circulation of clippings so they are broadcast evenly over the lawn.

## ENGINE SPEED & GROUND SPEED FOR BROADCASTING

ALWAYS operate the engine at full throttle when mowing.

ALWAYS use an appropriate ground speed for the thickness and height of the grass you are cutting (3rd gear or slower for manual gear models). If you hear the engine slowing down, you are mowing too fast, using a slower ground speed will improve the cutting efficiency of the blades and prevents many common cutting problems.

## HOW MUCH GRASS TO CUT OFF WHEN BROADCASTING

Mow when the grass is 3-5 inches long. Do NOT cut the grass shorter than 2 to 2-1/2 inches. Do NOT cut off more that 1 inch of grass in a single pass.

#### **Proper Mulching**

Mulching consists of a mower deck which cuts and recuts clippings into tiny particles and then blows them down INTO the lawn. These tiny particles decompose rapidly into by-products your lawn can use. UNDER PROPER CONDITIONS, your mulching mower will virtually eliminate noticeable clippings on the lawn surface.

NOTE: When mulching under heavy cutting conditions, a rumbling sound may be present and is normal.

## MULCHING REQUIRES EXCELLENT MOWING CONDITIONS

Mulching mowers cannot function properly if the grass is wet, or if the grass is simply too high to cut.

Mulching requires that the grass be dry and the appropriate amount be cut.

Do NOT use the mower as a mulching mower during the first two or three mowings in the spring. The long grass blades, quick growth, and often wetter conditions are more suitable for broadcasting (sidedischarging) or grass bagging operation.

#### **ENGINE SPEED & GROUND SPEED FOR MULCHING**

Use full engine throttle matched with a slow ground speed so that clippings will be finely cut. Ground speed while mulching should be HALF of the speed that would be used when broadcasting (side discharging) under similar conditions. Since mulching requires more horsepower than broadcasting, using a slower ground speed is vitally important for proper mulching operation.

#### **HOW MUCH GRASS TO MULCH**

The best mulching action typically results from cutting only the top 1/2 inch to 3/4 inch of grass blade. This provides short clippings which decompose properly. The ideal cutting height will vary with climate, time of year, and quality of your lawn. We recommend that you experiment with both the cutting height and ground speed until you achieve the best cut. Start with a high cutting height and using progressively lower settings until you find a cutting height that is matched to your mowing conditions and preferences.

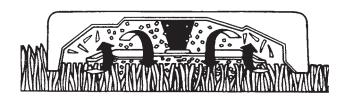


Figure 13. Mulching Action

#### ATTACHING A TRAILER

The maximum weight of a towed trailer should be less than 200 lbs (91kg). Secure the trailer with a appropriately sized clevis pin (A, Figure 14) and clip (B).

Excessive towed weight can cause loss of traction and loss of control on slopes. Reduce towed weight when operating on slopes. The surface being driven on greatly impacts traction and stability. Wet or slippery surfaces can greatly reduce traction and the ability to stop or turn. Carefully evaluate the surface conditions before operating the unit and trailer. NEVER operate on slopes greater than 10°. See SLOPE OPERATION and TOWED EQUIPMENT in the safety section of this manual for additional safety information.

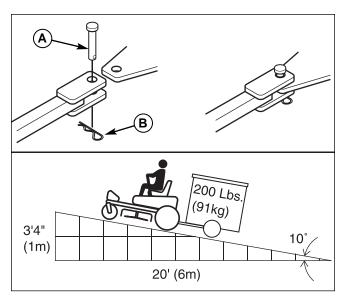


Figure 14. Trailer Weight Recommendations
A. Clevis Pin
B. Clip

#### **RAISE & LOWER THE ROLL BAR**

#### To lower the roll bar:

- 1. Pull the hair pin clips (A, Figure 15) out of the retainer pins (B).
- 2. Push or pull the top of the roll bar (C) forward against the rubber stops (D) and remove the retainer pins (B).
- 3. Lower the roll bar and reinstall the retainer pins and hair pin clips to secure the roll bar in the down position (see insert, Figure 15).

#### To raise the roll bar:

- Pull the hair pin clips (A) out of the retainer pins
   (B) and remove the retainer pins.
- 2. Raise the roll bar (C) until the rubber stops (D) contact the upright tubes.
- Push or pull the top of the roll bar forward against the rubber stops and reinstall the retainer pins and hair pin clips to secure the roll bar in the raised position.



## AVOID SERIOUS INJURY OR DEATH FROM ROLL OVER:

Keep roll bar in the raised position and use seat belt.

THERE IS NO ROLL OVER PROTECTION WHEN THE ROLL BAR IS DOWN

Lower the roll bar only when necessary and NEVER remove it.

Do NOT use seat belt when the roll bar is down.

Raise the roll bar as soon as clearance permits. Do NOT jump off if mower tips.

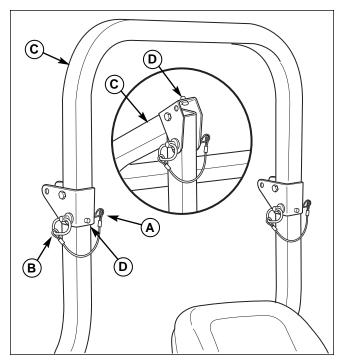


Figure 15. Raise & Lower the Roll Bar

- A. Hair Pin Clip
- **B.** Retainer Pin
- C. Roll Bar
- D. Rubber Stop

#### **STORAGE**

Temporary Storage (30 Days Or Less)

Remember, the fuel tank will still contain some fuel, so never store the unit indoors or in any other area where fuel vapor could travel to any ignition source. Fuel vapor is also toxic if inhaled, so never store the unit in any structure used for human or animal habitation.

Here is a checklist of things to do when storing your unit temporarily or in between uses:

- Keep the unit in an area away from where children may come into contact with it. If there's any chance of unauthorized use remove the ignition key.
- If the unit can't be stored on a reasonable level surface, chock the wheels.
- · Clean all grass and dirt from the mower.
- If temperature is expected to drop below 35 degrees, refer to Long Term Storage, Item 2.

## Long Term Storage (Longer Than 30 Days)

Before you store your unit for the off-season, read the Maintenance and Storage instructions in the Safety Rules section, then perform the following steps:

- Drain crankcase oil while engine is hot and refill with a grade of oil that will be required when unit is used again.
- Use an Antifreeze tester to check the cooling system's level of protection. Read the instructions on the Antifreeze container for the appropriate ratio of water to Antifreeze for your geographical area.
- 3. Prepare the mower deck for storage as follows:
  - a. Remove mower deck from the unit.
  - b. Clean underside of mower deck.
  - c. Coat all bare metal surfaces with paint or light coat of oil to prevent rusting.
- 4. Clean external surfaces and engine.
- Prepare engine for storage. See engine owner's manual.
- Clean any dirt or grass from cylinder head, engine housing and air cleaner element.
- Cover air cleaner and exhaust outlet tightly with plastic or other waterproof material to keep out moisture, dirt and insects.
- 8. Completely grease and oil unit as outlined in the Regular Maintenance section.
- 9. Clean up unit and apply paint or rust preventative to any areas where paint is chipped or damaged.
- 10. Be sure the battery is filled to the proper level with water and is fully charged. Battery life will be increased if it is removed, put in a cool, dry place and fully charged about once a month. If battery is left in unit, disconnect the negative cable.
- 11. Drain fuel system completely or add a diesel fuel stabilizer to the fuel system. If you have chosen to use a fuel stabilizer and have not drained the fuel system, follow all safety instructions and storage precautions in this manual to prevent the possibility of fire from the ignition of diesel fumes. Remember, diesel fumes can travel to distant sources of ignition and ignite, causing risk of explosion and fire.

## **WARNING**

Never store the unit, with diesel fuel in engine or fuel tank, in a heated shelter or in enclosed, poorly ventilated enclosures. Diesel fumes may reach an open flame, spark or pilot light (such as a furnace, water heater, clothes dryer, etc.) and cause an explosion.

Handle diesel fuel carefully. It is highly flammable and careless use could result in serious fire damage to your person or property.

Drain fuel outdoors into an approved container and away from open flame or sparks.

NOTE: Diesel fuel, if permitted to stand unused for extended periods (30 days or more), may develop gummy deposits which can adversely affect the fuel pump and injector tubes and cause engine malfunction. To avoid this condition, add a diesel fuel stabilizer to the fuel tank and run the engine a few minutes, or drain all fuel from the unit before placing it in storage.

## STARTING AFTER LONG TERM STORAGE

Before starting the unit after it has been stored for a long period of time, perform the following steps.

- Remove any blocks from under the unit.
- 2. Install the battery if it was removed.
- 3. Unplug the exhaust outlet and air cleaner.
- 4. Fill the fuel tank with fresh fuel. See engine manual for recommendations.
- 5. See engine owner's manual and follow all instructions for preparing engine after storage.
- Check crankcase oil level and add proper oil if necessary. If any condensation has developed during storage, drain crankcase oil and refill.
- 7. Inflate tires to proper pressure. Check fluid levels.
- 8. Start the engine and let it run slowly. DO NOT run at high speed immediately after starting. Be sure to run engine only outdoors or in well ventilated area.

#### DIESEL FUEL RECOMMENDATIONS

Fuel companies provide fuel tailored to meet the existing weather conditions. These fuels change at the start of the predominant season according to regional weather trends.

Winter fuels are tailored to give ease of starting for cold weather. Summer fuel may be somewhat heavier than winter fuel resulting in slightly better fuel economy and power. Spring and fall fuel is an average blend between winter and summer blend.

For these reasons an effort should be made to purchase fuels in such quantities that they are not carried over into the next season. Using the wrong blend of fuel can cause problems with the engine.

Refer to the engine manufacturer's manual for specific fuel recommendations.

#### **MAINTENANCE SCHEDULE & PROCEDURES**

The following schedule should be followed for normal care of your rider and mower. You will need to keep a record of your operating time. Determining operating time is easily accomplished by observing the hour meter.

SAFETY ITEMS	Before Each Use	Every 5 Hours	Every 25 Hours	Every 100 Hours	Every 250 Hours	Spring & Fall
Check Safety Interlock System	•					•
Check Rider Brakes	•					•
RIDER MAINTENANCE	Before Each Use	Every 5 Hours	Every 25 Hours	Every 100 Hours	Every 250 Hours	Spring & Fall
Check Rider / Mower for loose hardware	•					
Clean Deck & Check / Replace Mower Blades				•		
Lubricate Rider & Mower				•		
Clean Battery & Cables				•		
Check Tire Pressure				•		
Check Hydraulic Oil				•		
Change Hydraulic Oil Filter					•	
ENGINE MAINTENANCE	Before Each Use	Every 5 Hours	Every 25 Hours	Every 100 Hours	Every 250 Hours	Spring & Fall
Check Engine Oil Level	•					
Check / Clean Cooling Fins & Intake **			•			
Service Air Filter (every 200 hours)						
Change Oil & Filter (every 200 hours)						
Check Fuel Filter / Drain Water Separator*			•			
Check & Clean Radiator Screens	•					•
Check Coolant Level	•					
Change Coolant						•

<sup>\*</sup> Change every 400 hours

#### **CHECK TIRE PRESSURES**

Tire Pressure should be checked periodically, and maintained at the levels shown in the chart. Note that these pressures may differ slightly from the "Max Inflation" stamped on the side-wall of the tires. The pressures shown provide proper traction, improve cut quality, and extend tire life.

Tire	Pressure
Front	25 psi (1,72 bar)
Rear	18 psi (1,24 bar)

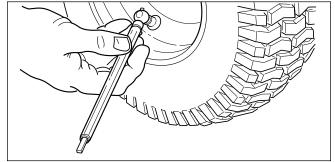


Figure 16. Checking Tire Pressure

<sup>\*\*</sup> More often in hot (over 85° F: 30° C) weather or dusty operating conditions.

#### CHECKING / ADDING FUEL

#### To add fuel:

NOTE: Refer to the Diesel Fuel Specification Chart (Figure 17) for specific fuel recommendations.

- 1. Remove the fuel cap (A, Figure 18).
- 2. Fill the tank to the bottom of the fill tube. This will leave room in the tank for fuel expansion.
- 3. Install and hand tighten the fuel cap.
- 4. Repeat same process for opposite tank.

#### WARNING

Diesel fuel is highly flammable and must be handled with care. Never fill the tank when the engine is still hot from recent operation. Do not allow open flame, smoking or matches in the area. Avoid over-filling and wipe up any spills.

Do not drain or replace fuel filter when engine is hot, as spilled fuel may ignite. Make sure the filter drain valve is fully closed before returning the unit to service.



#### **▲ WARNING**

Fuel leaked or spilled onto hot surfaces or electrical components can cause a fire. To help prevent possible injury, turn the ignition switch off when changing fuel filters or water separator elements. Clean up fuel spills immediately.

#### **FUEL FILTER**

This unit is equipped with two fuel filters. One is a water separator (A, Figure 20) mounted to the frame near the engine, and the fuel filter (A, Figure 3) is located under the seat. The water separator should be drained every 25 hours or whenever water is visible in the bowl. Replace both fuel filters every 400 hours of operation or as required.

#### Removing the Rear Engine Guard:

The rear engine guard must be removed to gain access to the water separator.

- 1. Turn the engine off, set the parking brake, remove the ignition key, and wait for all moving parts to
- 2. Remove the rear engine guard retaining bolts (A, Figure 19).
- 3. Remove the rear engine guard (B) by sliding it backwards and away from the machine.

Diesel Fuel Specification	Location
No. 2-D, No. 1-D, ASTM D975-94	USA
EN590:96	European Union
ISO 8217 DMX	International
BS2869-A1 or A2	United Kingdom
JIS K2204 Grade No. 2	Japan
KSM-2610	Korea
GB252	China

Figure 17. Diesel fuel Specification Chart

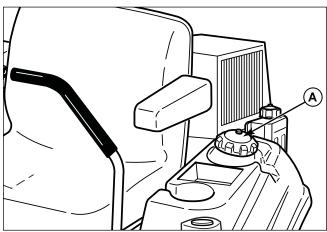


Figure 18. Fill Fuel Tank A. Fuel Cap



Do not use Kerosene in place of diesel fuel or mix with diesel fuel. Kerosene will damage the engine.

Refer to Figure 14 for specific fuel recommendations.

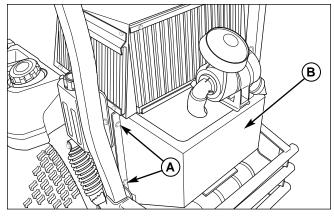


Figure 19. Rear Engine Guard A. Rear Engine Guard Retaining Bolts

B. Rear Engine Guard

#### To Replace the Fuel Filter:

- Turn the engine off, set the parking brake, remove the ignition key, and wait for all moving parts to stop.
- 2. Allow the engine and surrounding areas to cool to room temperature.
- 3. Close both fuel tank shut off valves (See Figure 2 for location).

Note: Fuel filter is replaced as an assembly only. The filter element is not replaceable separately.

- Remove the filter from the support and remove fuel hoses from filter. When removing the fuel filter, carefully hold it to prevent the fuel from spilling.
- 5. Install the new filter onto the support, reconnect fuel hoses, and open both fuel tank shut off valves. Wipe up any spilled fuel.

#### To Drain the Water separator:

- 1. Turn the engine off, set the parking brake, remove the ignition key, and wait for all moving parts to stop.
- 2. Allow the engine and surrounding areas to cool to room temperature.
- 3. Close both fuel tank shut off valves (See Figure 2 for location).
- 4. Rotate the water separator shut off valve (A, Figure 21) counterclockwise to the "OFF" position.
- Unscrew the water bowl from the water separator assembly. Dispose of the bowls contents properly.
- Screw the water bowl back into the water separator, rotate the water separator shut off valve clockwise to the open position, and open the fuel tank shut off valves.

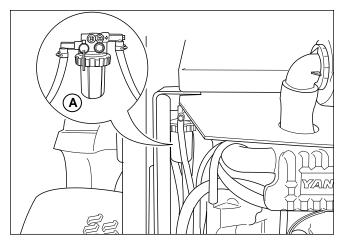


Figure 20. Drain Water Separator A. Water Separator



The water separator is under suction during normal engine operation. Ensure the drain valve is tightened securely to help prevent air from entering the fuel system.

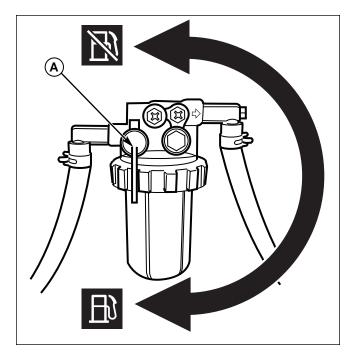


Figure 21. Draining The Water separator A. Water separator Shut Off Valve

#### SERVICE AIR FILTER

#### Removal of air filter elements:

- Unfasten the two retaining clamps and remove the cover (A, Figure 22) from the air cleaner housing (D).
- Remove the primary element (B) and the secondary element (C) from the air cleaner housing by pulling them out.

#### Cleaning and changing of air filter elements:

- 1. Replace the element(s) if damaged, excessively dirty or oily, or every 200 hrs.
- To Clean Elements: Blow air through the elements from the inside using 42-71 psi (2,89-4,90 bar) compressed air to remove dust and debris. Use the lowest possible air pressure to clean the element without damaging it.
- Clean all components of the air cleaner housing, cover, and passages. Cover the intake port with a cloth while cleaning to prevent foreign objects from falling into intake manifold.

#### Reassembly of air filter:

 Install the elements into the air cleaner housing, and reassemble the air cleaner housing and cover. Fasten the retaining clamps.

## CHECK / ADD / CHANGE ENGINE OIL AND FILTER

Refer to rear cover for oil capacity.

#### To check the engine oil level:

- 1. Park machine on a flat, level surface.
- Tip the seat forward and loosen the thumb bolts (A, Figure 23) that secure the engine access panel (B). Remove the engine access panel.
- 3. Remove dipstick (B, Figure 24) and wipe with clean cloth.
- Fully reinsert dipstick. The oil level should be between the upper and the lower lines on the dipstick.

# To add the engine oil (Refer to Figure 25 for oil specifications and rear cover of this manual for oil capacity):

- 1. Park machine on a flat, level surface.
- 2. Remove dipstick, add oil at filler tube (B, Figure 24).
- 3. Wait three minutes and check oil level.
- 4. Add more oil if necessary.
- Replace dipstick and hand tighten. Overtightening may damage the dipstick.

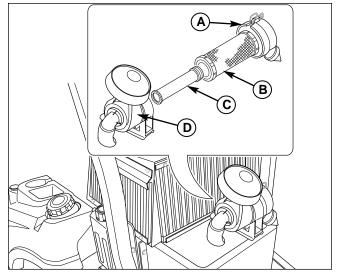


Figure 22. Air Cleaner Assembly

- A. Cover
- **B. Primary Element**
- C. Secondary Element
- D. Housing

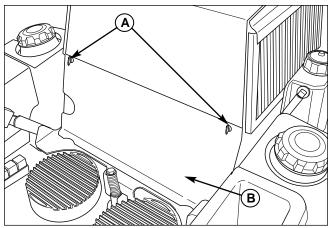


Figure 23. Remove Engine Access Panel

- A. Thumb Bolt
- **B. Engine Access Panel**

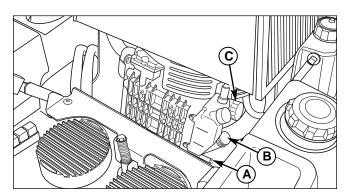


Figure 24. Oil Dipstick and Filter

- A. Drain Plug
- B. Dipstick and Filler Tube
- C. Oil Filter

#### To change the engine oil and filter:

- 1. Park machine on a flat, level surface.
- Start the engine and bring it up to operating temperature.
- 3. Stop the engine.
- 4. Remove the dipstick to vent the crankcase and allow the engine oil to drain easily.
- 5. Position a container under the drain hole under the drain plug (A) to collect waste oil.
- 6. Remove the drain plug. Allow all oil to drain.
- 7. Install the drain plug and tighten to 14-17 ft/lb (19.6-23.5 Nm)
- 8. Dispose of used oil properly.
- To remove the oil filter (C) turn the filter counterclockwise using an oil filter wrench. Verify the oil filter gasket is removed and discard oil filter and gasket.
- 10. Clean the engine oil filter mounting face.
- 11. Lightly coat the gasket on the new oil filter with clean engine oil. Install the new oil filter manually by turning it clockwise until it contacts the mounting face. Tighten an additional 3/4 of a turn using the oil filter wrench.
- 12. Fill the engine with specified oil (Refer to Figure 25) to specified capacity (Refer to rear cover of this manual).
- 13. Warm up the engine by running for five minutes and check for any leaks. Shut off the engine, wait ten minutes and recheck oil level. Replace the dipstick. Wipe up any spilled oil.

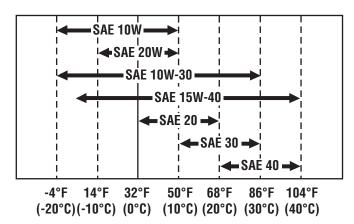


Figure 25. SAE Service Grade Viscosity Chart.

#### Engine oil specifications:

Use an engine oil that meets or exceeds the following guidelines and classifications:

- API (American Petroleum Institute) Service Categories CD or higher.
- ACEA (Association des Costructeurs Européen d'Auomobiles) Service Categories E-3, E-4, and E-5.
- JASO (Japanese Automobile Standards Organization) Service Category DH-1.

#### CHECK HYDRAULIC OIL LEVEL

- 1. Before removing the reservoir cap, make sure the area around the reservoir cap and fill neck of the reservoir is free of dust, dirt, or other debris.
- 2. Unscrew the reservoir cap (B, Figure 26).
- 3. Look down the filler neck of the hydraulic oil reservoir (A, Figure 26) and observe the oil level. When cold, the oil level should be approximately 4" (10 cm) below top of the filler neck.
- If necessary, add either Mobil 1<sup>™</sup>, 15W-50 synthetic oil or Castrol Syntec<sup>™</sup> 5W-50 oil. DO NOT use conventional oils.
- 5. Reinstall the reservoir cap.

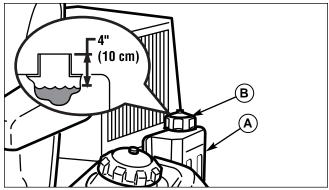


Figure 26. Checking Hydraulic Oil Level A. Hydraulic Oil Reservoir

B. Reservoir Cap

#### CHANGE HYDRAULIC OIL FILTER

Change Interval: Every 250 Hours Filter Part Number: 1719168

NOTE: Removing the oil filter from the filter base will drain the oil reservoir. Have a suitable container ready to catch any spilled oil. Ferris recommends this be a dealer-only service item.

- 1. Locate the transmission oil filter (A, Figure 27).
- 2. Lubricate the new filter gasket with a few drops of transmission oil. Fill the filter half full of oil.
- 3. Clean the area around the filter base and remove the filter. Do NOT drain the hydraulic system oil.
- 4. Thread the new filter onto the filter base until the gasket makes contact, then tighten 3/4 of a turn more.
- 5. Run the unit for several minutes and check the transmission oil level.

IMPORTANT NOTE: Use caution after changing the filter; air in the hydraulic system may affect the responsiveness of the control levers. Repeat step 5 until the air is out of the system.

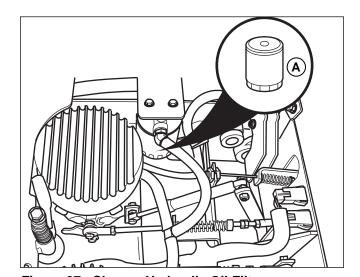


Figure 27. Change Hydraulic Oil Filter A. Hydraulic Oil Filter

#### **CHECK ENGINE COOLANT LEVEL**

The engine coolant level and quality should be checked before each use, when the engine is cool and off.

The cooling system is a closed type. Never open the radiator cap unless you are flushing the system. Opening the radiator cap may induce air into the cooling system and may cause overheating.

- 1. Remove the engine access panel (See Figure 23).
- 2. Check the coolant level only at the overflow reservoir (A, Figure 28). The coolant level should be at the LOW (COLD) mark.
- If the coolant level is insufficient, remove the cap (E) from the reservoir and add coolant to the "H" mark.
- 4. Reinstall the cap.

NOTE: Proper coolant mix is a 50/50 mixture of ethylene glycol and distilled water. See engine owners manual for engine coolant specifications.

#### CHANGE ENGINE COOLANT

This procedure is for refilling the radiator for the first time or refilling it after it is flushed.

- 1. Check to be sure that all hoses are connected and all clamps are in place.
- 2. Turn the radiator cap (A, Figure 29) counterclockwise 90 degrees. Push down on the cap and continue to turn counterclockwise to remove.

NOTE: Do NOT attempt to remove the radiator cap without pushing down on it first.

- 3. Pour the engine coolant slowly into the radiator until it is even with the lip of the engine coolant filler port. Make sure that air bubbles do not develop as you fill the radiator. As the coolant enters the radiator, squeeze the radiator hoses (B, Figure 28) to help remove air from the cooling system.
- 4. Fasten the radiator cap. Align the tabs on the back side of the radiator cap with the notches on the engine coolant filler port. Press down and turn the cap clockwise about 90 degrees.
- Remove the cap of the reserve tank and fill it to the LOW (COLD) (C) mark with engine coolant. Reinstall the cap.
- 6. Check the hose the connects the reserve tank to the radiator (B, Figure 29). Be sure it is securely connected and there are no cracks or damage. If the hose is damaged, engine coolant will leak out instead of going into the reserve tank.

## **WARNING**

#### PRESSURIZED SYSTEM

Hot coolant can cause serious burns. Never open the radiator cap. Wait until the engine is cool before checking the coolant level or removing the reservoir cap.

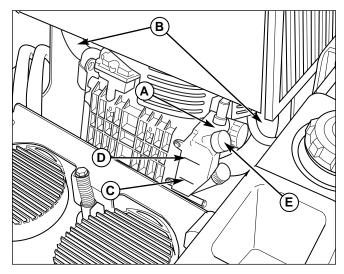


Figure 28. Checking The Engine Coolant Level

- A. Overflow Reservoir
- **B.** Radiator Hoses
- C. Low (Cold) Mark
- D. Full (Hot) Mark
- E. Cap

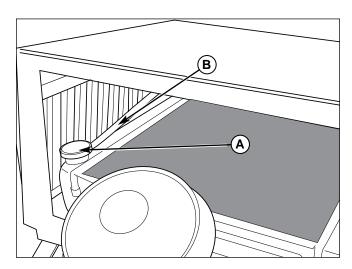


Figure 29. Changing the Radiator Coolant

A. Radiator Cap

B. Radiator to Reserve Bottle Hose

#### **Regular Maintenance**

#### Change Engine Coolant cont'd.

7. Run the engine until it is at operating temperature. Check the level of engine coolant in the reserve tank. When the engine is running and the engine coolant is at normal temperature, the coolant level in the tank should be at the FULL (HOT) (D, Figure 28) mark. If the engine coolant is not at the FULL (HOT) mark, add additional engine coolant to the reserve tank to bring the level to the FULL (HOT) mark.

#### **CLEAN RADIATOR & SCREEN**

Clean the radiator and screen before each use, or as required (depending on conditions) to allow proper air-flow through the radiator.

#### Removing the Radiator Screen:

- Remove the rear radiator screen retaining bolts (A, Figure 30) and remove the rear radiator screen (B).
- 2. Slide the side radiator screens (C) out of the slots in the rear of the hood.
- Flush the screen with water or blow clean with air.
   Flush the radiator core with water or blow clean with air.
   See engine owners manual for proper radiator cleaning procedures.
- 4. To reinstall the radiator screen, reverse removal process.

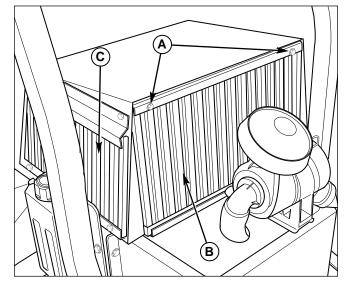


Figure 30. Removing the Radiator Screens

- A. Rear Radiator Screen Retaining Bolts
- B. Rear Radiator Screen
- C. Side Radiator Screen (Left Hand one shown.)

### **LUBRICATION**

Lubricate the unit at the locations shown in Figures 31 through 35 as well as the following lubrication points.

### Grease:



- front caster wheel axles & yokes
- · deck lift pivot blocks
- mower deck spindles
- mower deck idler arm

Use grease fittings when present. Disassemble parts to apply grease to moving parts when grease fittings are not installed.

Not all greases are compatible. Ferris Red Grease (p/n 5022285) is recommended, automotive-type high-temperature, lithium grease may be used when this is not available.

### Oil:



- control handle pivots
- seat plate pivots
- deck lift pivots
- discharge chute hinge

Generally, all moving metal parts should be oiled where contact is made with other parts. Keep oil and grease off belts and pulleys. Remember to wipe fittings and surfaces clean both before and after lubrication.

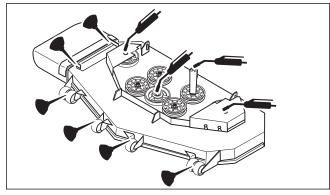


Figure 31. Deck Lubrication

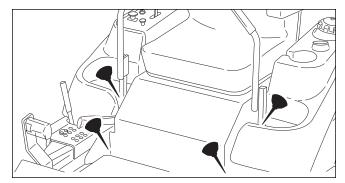


Figure 32. Control Handle Pivots & Seat Plate Pivots

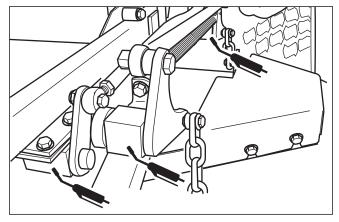


Figure 33. Deck Lift Linkage Pivots

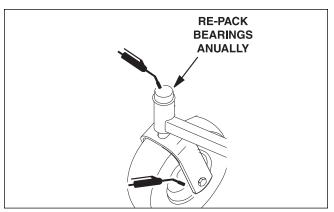


Figure 34. Front Caster & Wheel

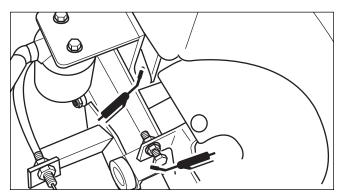


Figure 35. Suspension & Deck Lift Pivots

# **Regular Maintenance**

### **BATTERY MAINTENANCE**

NOTE: This unit is equipped with a maintenance-free BCIU1 battery.

### **Cleaning the Battery and Cables.**

- 1. Remove the floor pan mounting hardware (C, Figure 36) and remove the floor pan (D) to expose the battery.
- 2. Disconnect the cables from the battery, negative (black) cable first (B).
- 3. Clean the battery terminals and cable ends with a wire brush until shiny.
- 4. Reinstall the battery and reattach the battery cables, positive (red) cable first (A).
- 5. Coat the cable ends and battery terminals with petroleum jelly or non-conducting grease.
- 6. Reposition the floor pan and secure in place with the hardware previously removed.



Be careful when handling the battery. Avoid spilling electrolyte. Keep flames and sparks away from the battery.

When removing or installing battery cables, disconnect the negative cable FIRST and reconnect it LAST. If not done in this order, the positive terminal can be shorted to the frame by a tool.

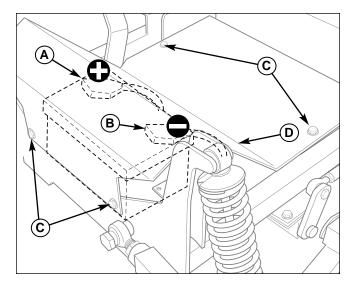


Figure 36. Battery Compartment A. Positive (+) Cable & Terminal

- B. Negative (-) Cable & Terminal
- C. Floor pan Mounting Hardware
- D. Floor pan

### SERVICING THE MOWER BLADES

- Blades should be sharp and free of nicks and dents. If not, sharpen blades as described in the following steps.
- 2. To remove blade for sharpening, use a 1" wrench on the flats of the spindle shaft while removing the blade mounting bolt with a 15/16" wrench (Figure 37).
- 3. Use a file to sharpen blade to fine edge. Remove all nicks and dents in blade edge. If blade is severely damaged, it should be replaced.
- 4. Balance the blade as shown in Figure 38. Center the blade's hole on a nail lubricated with a drop of oil. A balanced blade will remain level.
- Reinstall each blade with the tabs pointing up toward deck as shown in Figure 39. Secure with a bolt and flat washer and torque bolts to 70 ft.lbs. (94 N.m.).



Mower blades are sharp. For your personal safety, do not handle mower blades with bare hands. Careless or improper handling of blades may result in serious injury. For your personal safety, blade mounting bolts must each be installed with a flat washer then securely tightened. Torque blade mounting bolts to 70 ft.lbs. (94 N.m.)

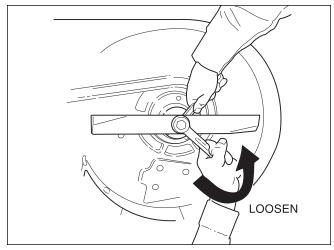


Figure 37. Loosening The Blade For Removal

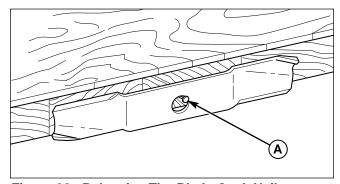


Figure 38. Balancing The Blade On A Nail A. Nail

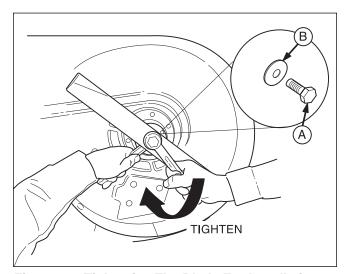


Figure 39. Tightening The Blade For Installation A. Blade Bolt B. Flat Washer

### TROUBLESHOOTING

While normal care and regular maintenance will extend the life of your equipment, prolonged or constant use may eventually require that service be performed to allow it to continue operating properly.

The troubleshooting guide below lists the most common problems, their causes and remedies.

See the information on the following pages for instructions on how to perform most of these minor adjustments and service repairs yourself. If you prefer, all of these procedures can be performed for you by your local authorized dealer.



To avoid serious injury, perform maintenance on the tractor or mower only when the engine is stopped and the parking brake engaged.

Always remove the ignition key, disconnect the spark plug wire and fasten it away from the plug before beginning the maintenance, to prevent accidental starting of the engine.

### TROUBLESHOOTING THE RIDER

PROBLEM	CA	USE	REMEDY
Engine will not turnover or start.	1.	Parking brake not engaged.	Engage parking brake.
_	2.	PTO (electric clutch) switch	2. Place in OFF position.
		in ON position.	·
	3.	Out of fuel.	3. If engine is hot, allow it to cool, then refill
			the fuel tanks. Prime the fuel system.
	4.	Motion Control Handles not	4. Lock handles in neutral position.
		locked in neutral position.	
	5.	Operator not in seat.	<ol><li>Assume operator's position in seat.</li></ol>
	6.	Glow plugs not pre-heated.	6. Pre-heat glow plugs.
	7.	Fuse blown.	7. Replace fuse.
	8.	Battery terminals require	8. Clean the battery terminals
		cleaning.	
	9.	Battery discharged or dead.	9. Recharge or replace.
	10.	Wiring loose or broken.	<ol><li>Visually check wiring &amp; replace broken of frayed wires. Tighten loose connections.</li></ol>
	11.	Solenoid or starter motor faulty.	<ol> <li>Repair or replace. See authorized service dealer</li> </ol>
	12.	Safety interlock switch faulty.	<ol> <li>Replace as needed. See authorized service dealer.</li> </ol>
	13.	Water in fuel.	13. Drain fuel & refill with fresh fuel.
	14.	Fuel is old or stale.	14. Drain fuel & replace with fresh fuel.
Engine starts hard or runs poorly.	1.	Fuel mixture too rich.	1. Clean air filter.
	2.	Air in fuel system.	<ol><li>Prime the fuel system.</li></ol>
Engine knocks.	1.	Low oil level.	1. Check/add oil as required.
	2.	Using wrong grade oil.	2. See engine manual.
Excessive oil consumption.	1.	Engine running too hot.	1. Clean radiator screens and air cleaner.
	2.	Using wrong weight oil.	2. See engine manual.
	3.	Too much oil in crankcase.	3. Drain excess oil.
Engine exhaust is black.	1.	Dirty air filter.	1. Replace air filter. See engine manual.

38

### RIDER TROUBLESHOOTING CONTINUED.

PROBLEM	CAUSE	REMEDY
Engine runs, but rider will not drive.	Hydraulic release valve(s)     in "open" position.	Turn valve(s) clockwise to close.
	<ol><li>Belt is broken.</li></ol>	<ol><li>See Drive Belt Replacement.</li></ol>
	<ol><li>Drive belt slips.</li></ol>	<ol><li>See problem and cause below.</li></ol>
	<ol><li>Brake is not fully released.</li></ol>	<ol><li>See authorized service dealer</li></ol>
Rider drive belt slips.	<ol> <li>Pulleys or belt greasy or oily.</li> </ol>	1. Clean as required.
	<ol><li>Tension too loose.</li></ol>	Adjust spring tension.     See Drive Belt Replacement
	3. Belt stretched or worn.	3. Replace belt.
Brake will not hold.	Brake is incorrectly adjusted.	See Brake Adjustment.
	<ol><li>Brake pads worn.</li></ol>	<ol><li>Replace with new brake pads.</li></ol>
Rider steers or handles poorly.	<ol> <li>Steering linkage is loose.</li> <li>Improper tire inflation.</li> </ol>	<ol> <li>Check and tighten any loose connections.</li> <li>See Regular Maintenance Section.</li> </ol>

### TROUBLESHOOTING THE MOWER

dealer for repair.
ed.
um cutting
ge pointing toward
N.m.).
necessary.
balance blades.
ion.
elt.
eeded.
ed wire.
tment section
check alternator.
nce section.
tn cł

### TROUBLESHOOTING COMMON CUTTING PROBLEMS

### **CAUSE PROBLEM** Streaking. Blades are not sharp. 1. Sharpen your blades. 2. Replace your blades. Blades are worn down to far. Engine speed is too slow. 3. Always mow at full throttle. Ground speed is too fast. 4. Slow down. MANGANAS GAMESAKAN DAN ARAWATA 5. Deck is plugged with grass 5. Clean out the mower. Not overlapping cutting rows 6. Overlap your cutting rows. Wayayaya Sanga Sanga Bandan Banda Sanga Sa enough. Not overlapping enough when 7. When turning your effective cutting width 7. decreases-overlap more when turning. turning. Lawn is uneven or bumpy. 1. Roll or level the lawn. Scalping. Mower deck cutting height is 2. Raise the cutting height. set too low. Ground speed is too fast. 3. Slow down. Deck is not leveled correctly. 4. Correctly level the deck. Tire pressure is low or uneven 5. Check and inflate the tires. Stepped Cutting. Deck is not leveled correctly. 1. Level the deck correctly. Tires are not properly inflated. 2. Check and inflate the tires. 2. 3. Blades are damaged. 3. Replace the blades. 4. Repair or replace the deck. 4. Deck shell is damaged. 5. Mower spindle is bent or loose. 5. Repair or replace the spindle. Blades are installed incorrectly. 6. Reinstall the blades correctly. YMYDDINISTAMIN'IEDHoracenteristamini Uneven Cutting. Deck is not leveled correctly. 1. Level the deck correctly. 2. Blades are dull or worn. 2. Sharpen or replace the blades. Blades are damaged. 3. Replace the blades. 3. Deck is clogged with grass 4. Clean out the deck. clippings. Deck shell is damaged. 5. Repair or replace the deck. Mower spindle is bent or loose. 6. Repair or replace the spindle. VIII luureneen voien III Ulii vii voi seen voiri III 7. Blades are installed incorrectly. 7. Reinstall the blades correctly. 8. Tires are not properly inflated. 8. Check and inflate the tires. Stingers. 1. Blades are not sharp or nicked. 1. Sharpen your blades. Blades are worn down too far. 2. Replace your blades. 2. Engine speed is too slow. 3. Always mow at full throttle. 3. Ground speed is too fast. 4. Slow down. 4. Deck is plugged with grass. 5. Clean out the mower.

### **SEAT ADJUSTMENT**

See Figure 40. The seat can be adjusted forward and back. Move the lever forward, position the seat as desired, and release the lever to lock the seat into position.

# GROUND SPEED CONTROL LEVER ADJUSTMENT

The control levers can be adjusted in three ways. The alignment of the control levers, the placement of the levers (how close the ends are to one another) and the height of the levers can be adjusted.

### To Adjust the Handle Alignment

Loosen the mount bolts (A, Figure 41) and pivot the lever(s) (C) to align with each other.

### To Adjust the Handle Placement

Loosen the jam nuts and adjust the placement bolt (B, Figure 41) in or out to properly adjust the lever end spacing.

### To Adjust the Handle Height

Remove the mounting hardware and reposition the handle either up or down from its original position. You will need to readjust the handle alignment as described above.

### SPEED BALANCING ADJUSTMENT

If the rider veers to the right or left when the ground speed control levers are in the maximum forward position, the top speed of each of these levers can be balanced by turning the adjustment bolt(s) (A, Figure 42). Only adjust the speed of the wheel that is traveling faster.

### To Reduce the Speed of the Faster Wheel

- 1. Loosen the securing nut.
- Turn the top speed adjustment bolt COUNTER-CLOCKWISE to reduce the speed.
- 3. Retighten the securing nut when adjustment is complete.



DO NOT adjust the tractor for a faster overall speed forward or reverse than it was designed for.

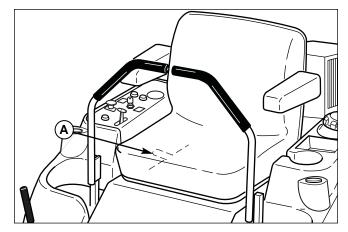


Figure 40. Seat Adjustment A. Seat Adjustment Lever

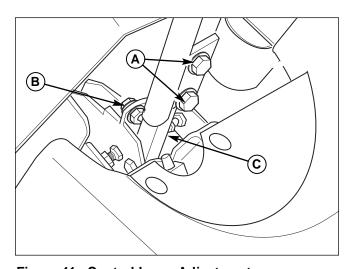


Figure 41. Control Lever Adjustment

- A. Alignment Hardware
- **B. Placement Hardware**
- C. Ground Speed Control Lever

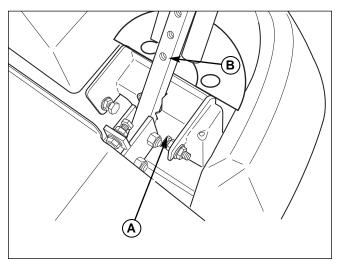


Figure 42. Top Speed Adjustment A. Top Speed Adjustment Bolt B. Control Lever Base

### **NEUTRAL ADJUSTMENT**

If the tractor "creeps" while the ground speed control levers are locked in NEUTRAL, then it may be necessary to adjust the linkage rod.

NOTE: Perform this adjustment on a hard, level surface such as a concrete floor.

- 1. Disengage the PTO, engage the parking brake and turn off the engine.
- 2. There are three nuts (B, Figure 43) on the linkage rod. The first two are to be used together to turn the rod and the third (towards the front of the machine) is used to lock the rod in place. Loosen the jam nut that locks against the ball joint (B, Figure 43) and turn the linkage rod (A) to adjust. If the machine creeps forward, turn the rod CLOCKWISE (while standing at the rear of the machine, facing forward), if the machine creeps backward, turn the rod COUNTER-CLOCKWISE.
- 3. Lock the jam nut (B) against the ball joint when neutral is achieved.

NOTE: This adjustment <u>should not</u> be performed while the machine is running. It may take several attempts to achieved neutral, depending upon how much the machine creeps.

# RETURN-TO-NEUTRAL ADJUSTMENT

To determine if it is necessary to adjust the neutral return, perform the following steps.

- 1. Disengage the PTO, engage the parking brake and turn off the engine.
- Move the ground speed control levers into the operating position, pull levers rearward and release.
- Move the ground speed control levers out towards the neutral position. If the levers do not align with the notches in the neutral lock plate, it is necessary to adjust the neutral return rod.

### TO ADJUST:

- 1. Loosen the set collar (B, Figure 44) locked against the return spring (A).
- 2. Lock the ground speed control levers in neutral.
- 3. Tighten set collar against the return spring.
- 4. Pull lever rearward and release to check that the lever stops aligned with notch in the neutral lock plate.

It is important to note that after every adjustment of the neutral return spring, the lever must be returned to locked position to properly check the neutral position.

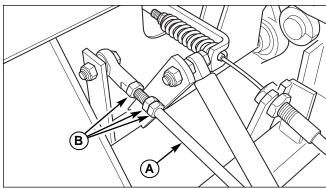


Figure 43. Neutral Adjustment (RH side shown)

- A. Adjustment Linkage Rod
- B. Nuts

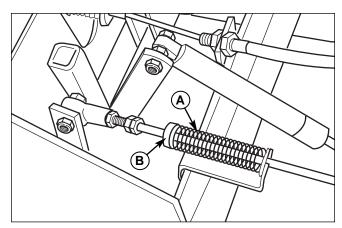


Figure 44. Return to Neutral Adjustment

A. Return Spring

B. Set Collar

### PARKING BRAKE ADJUSTMENT

- 1. Disengage the PTO, engage the parking brake, stop the engine and remove the ignition key.
- 2. Raise the seat plate.
- 3. Locate the brake spring (A, Figure 45).
- 4. With the parking brake engaged, measure the compressed spring length. The spring should be 1-15/16" 2" (4,9 5,1 cm) when compressed.
- 5. If the spring is not within this range, release the parking brake and turn the adjustment nut (B) to compress or release the spring.
- 6. Engage the parking brake and remeasure the spring.



Do not adjust the spring to be shorter than 1-15/16" (4,9 cm) when compressed. This may damage the brake mechanism.

If this does not correct the braking problem, see your Ferris dealer.

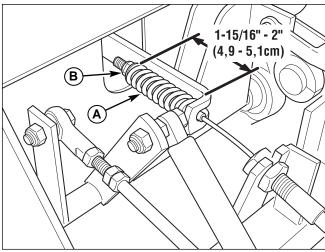


Figure 45. Parking Brake Adjustment

- A. Brake Spring
- **B.** Adjustment Nut

### SUSPENSION ADJUSTMENT

The shock assembly can be adjusted to vary the amount of pre-load applied to the springs. This allows the operator to maintain the ride height.

Use less pre-load for light weight operators. Use more pre-load for heavy weight operators.

### To adjust the spring pre-load:

- Park machine on a flat, level surface. Disengage the PTO, stop the engine and engage the parking brake
- See Figure 46. Using the supplied spanner wrench (p/n 5022853), insert the tip of the wrench into the notch in the pre-load adjuster. While holding the wrench with both hands, turn CLOCKWISE to decrease the pre-load, turn COUNTER-CLOCKWISE to increase the pre-load. Make sure that for each pair of shocks that the left-hand and right-hand are set to the same amount of pre-load.

NOTE: Spanner wrench is located under the seat. Rear tires must be removed to adjust the rear suspension.

NOTE: It is recommended that the rear suspension be adjusted stiffer due to the added weight of the collection system.

# **WARNING**

Use two hands when adjusting the shock springs. This will prevent the wrench from slipping while pressure is being applied.

### SUSPENSION ADJUSTMENT

### To adjust the upper mounting position:

- Park machine on a flat, level surface. Disengage the PTO, stop the engine and engage the parking brake.
- 2. Raise the rear of the machine and secure with jackstands. The jackstands must under the bumper. Chock the front wheels to prevent the machine from rolling.
- 3. Position the jack under the cross member that ties the suspension arms together and slowly raise the rear suspension to relieve the pressure on the upper shock mounting bolts.

NOTE: This will require small adjustments to the jack's position. The shock should move freely on the mounting bolt when the pressure is relieved.

- Remove the upper shock mounting hardware and pivot the shock to the position #2 (see Figure 45).
   Adjust the jack to align the shock mounts to the shocks.
- 5. Reinstall the upper shock mounting hardware and tighten securely.
- 6. Remove the jack from under the suspension cross member.
- 7. Remove the jackstands from under the machine.

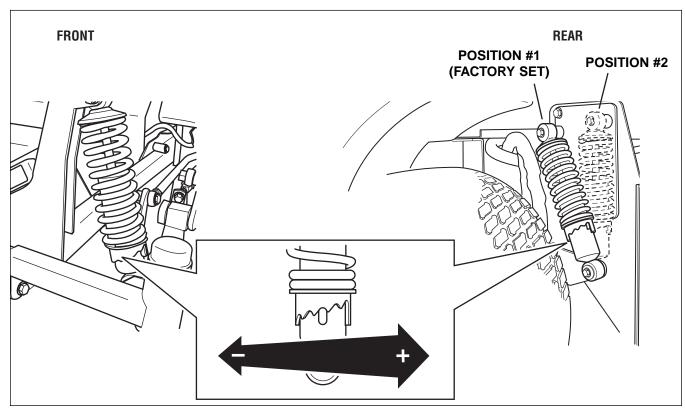


Figure 46. Suspension Adjustment

44

### MOWING HEIGHT ADJUSTMENT

The cutting height adjustment pin (A, Figure 47) controls the mower cutting height. The cutting height is adjustable between 1-3/4" (4,4 cm) and 5" (12,7 cm) in 1/4" (0,64 cm) increments.

- 1. Depress the deck lift foot pedal (B) until it locks into the 5" (12,7 cm) position.
- 2. Place the cutting height adjustment pin in the desired cutting height.
- 3. Depress the deck lift foot pedal then push the lock lever (C) towards the right to release the lock.
- 4. Release the deck lift foot pedal until it comes to rest against the cutting height adjustment pin.

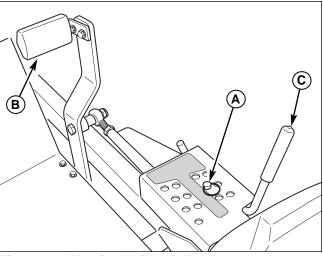


Figure 47. Mowing Height Adjustment

- A. Cutting Height Adjustment Pin
- **B. Deck Lift Foot Pedal**
- C. Deck Lift Lock lever

### **FOOT PEDAL ADJUSTMENT**

The deck lift foot pedal can be adjusted to accommodate the operator's height for optimal comfort.

### To adjust pedal position:

- 1. Remove the foot pedal (A, Figure 48) from the pedal mount tab (B).
- 2. Remove the pedal mount hardware (C) and rotate the tab 180 degrees.
- 3. Reinstall the pedal mount hardware and tighten securely.
- 4. Reinstall the foot pedal on the pedal mount tab in the proper orientation as shown in Figure 48.

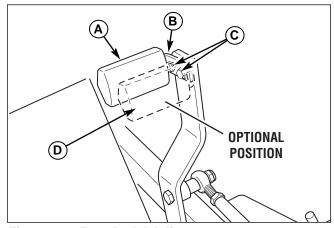


Figure 48. Foot Pedal Adjustment

- A. Deck Lift Foot Pedal
- **B. Pedal Mount Tab**
- C. Pedal Mount Hardware
- D. Optional Position

# DECK LIFT ROD TIMING ADJUSTMENT

- Park machine on a flat, level surface. Disengage the PTO, stop the engine and engage the parking brake. Rear tires must be inflated to 18 psi (1,24 bar); front tires to 25 psi (1,72 bar).
- To check the inner lift rod timing, measure and record the distance between the inner lift pivots and the inner rod pivots. Repeat for other side of unit. See Figure 49.
- To check the outer lift rod timing, measure and record the distance between the outer lift pivots and the outer rod pivots. Repeat for other side of unit. See Figure 49.
- 4. If the measurements for the inner rods are equal, and the measurements for the outer rods are equal, no further adjustment is required. If the measurements are NOT equal (greater than 1/8" (3,17mm) difference), adjustment is required, continue with Step 5.
- 5. Refer to figure 50. Lock the deck lift pedal in the 5" (12,7cm) position. Remove the cutting height adjustment pin and lower the mower deck.
- 6. To ensure that the deck is in the lowest position, push the pedal by hand towards the rear of the unit and install the height adjustment pin in the 3" (7.6cm) position to hold in place.
- Block up the mower deck until all hanger chains are slack.
- 8. Refer to Figure 51. To adjust the inner lift rod, loosen the jam nut on the front ball joint then remove the 1/2" hardware fastening the ball joint the the lift pivot arm. Turn the ball joint clockwise to shorten the distance between the rod pivots or counterclockwise to lengthen the distance between the rod pivots. Reinstall the ball joint on the lift pivot arm and secure with the 1/2" hardware previously removed. Tighten the jam nut against the lift rod.
- 9. Refer to Figure 51. To adjust the outer lift rod, loosen the jam nut on the front ball joint then remove the 1/2" hardware fastening the ball joint the the lift pivot arm. Turn the ball joint clockwise to shorten the distance between the rod pivots or counterclockwise to lengthen the distance between the rod pivots. Reinstall the ball joint on the lift pivot arm and secure with the 1/2" hardware previously removed. Tighten the jam nut against the lift rod.
- 10. Remove blocks from under the mower deck.
- 11. Remove the the cutting height adjustment pin from in front of the deck lift pedal arm. Lift mower deck and reinstall adjustment pin in desired mowing height.

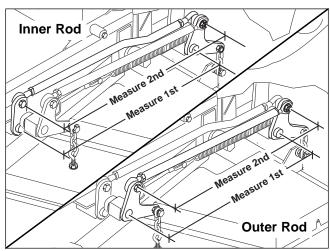


Figure 49. Measure the Inner & Outer Lift Rods

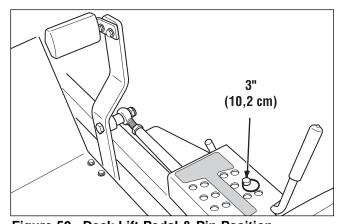


Figure 50. Deck Lift Pedal & Pin Position

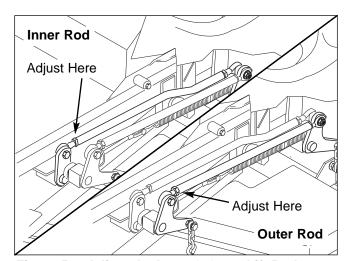


Figure 51. Adjust the Inner & Outer Lift Rods

46 www.ferrisindustries.com

### **DECK LEVELING ADJUSTMENT**

NOTE: Before adjusting the deck level, the deck lift rod timing must be checked and/or adjusted.

- 1. Park machine on a flat, level surface. Disengage the PTO, stop the engine and engage the parking brake. Rear tires must be inflated to 15 psi (1,03 bar); front tires to 25 psi (1,72 bar).
- Lock the deck lift pedal in the 5" (12,7cm) position. Place the deck height adjustment pin in the 4" position and lower deck the lift pedal until the arm contacts the pin.
- 3. Place 2 x 4 blocks under each corner of the mower deck with the 3-1/2" sides being vertical. Place a 1/4" (0,64cm) thick spacer on top of the rear 2 x 4 blocks. See Figure 52.
- 4. Adjust the front eyebolts until the chains are tight and the deck is still resting on the 2 x 4's. Tighten jam nuts. See Figure 53.
- 5. Loosen the nuts and allow the rear of the deck to rest on the 2 x 4's and 1/4" spacers. Slide the chains down in the slots until the chains are tight and tighten the nuts. See Figure 53.
- 6. Remove all 2 x 4 blocks and spacers from under the mower deck.

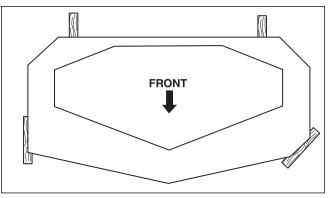


Figure 52. 2 x 4 Locations (Arrow points toward front of the deck)

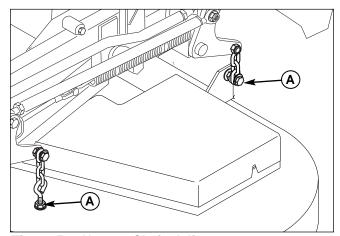


Figure 53. Hanger Chain Adjustment A. Adjustment Points

### **DECK LIFT SPRING**

The deck lift springs (A, Figure 54) are factory set to provide optimal lifting performance.

Although it is fastened with a multi-position anchor, this is NOT AN ADJUSTMENT POINT.

DO NOT attempt to adjust the spring length or lifting performance will be compromised.

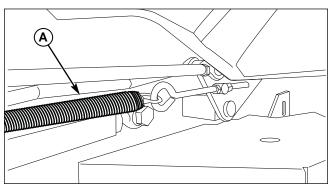


Figure 54. Deck Lift Spring Location A. Deck Lift Spring

# HYDRAULIC PUMP DRIVE BELT REPLACEMENT

- Park the tractor on a smooth, level surface such as a concrete floor. Disengage the PTO, engage the parking brake, turn off the engine, and remove the ignition key.
- 2. Remove the PTO drive belt (see MOWER BELT REPLACEMENT for removal instructions).
- 3. Remove the hardware that secures the clutch anchor pad to the PTO clutch.
- 4. Loosen the nut towards the front of the machine on the spring anchor hook (G, Figure 55) to release the majority of the belt tension. Use caution and remove the nut to completely release the tension.
- Remove the old belt and replace it with a new one. Make sure the V-side of the belt runs in the grooves of the crankshaft pulley and pump pulleys (B & C).
- Reinstall the anchor hook (G) into the anchor tab and loosely fasten the nut. Adjust the anchor hook until a measurement of 8-3/8" (21,2 cm) is achieved from the outside if the spring hooks. Tighten nut.
- 7. Reinstall the clutch anchor pad to the PTO clutch and secure with the hardware previously removed.
- 8. Reinstall the PTO drive belt.

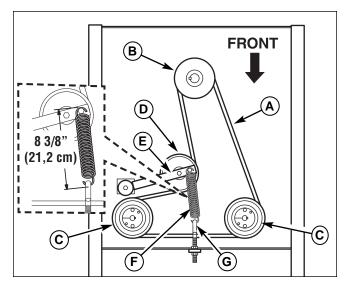


Figure 55. Hydraulic Pump Drive Belt Replacement

- A. Pump Drive Belt
- **B.** Crankshaft Pulley
- C. Pump Pulley
- D. Idler Pulley
- E. Idler Arm
- F. Spring
- **G. Spring Anchor Hook**

### MOWER BELT REPLACEMENT



To avoid damaging belts, DO NOT PRY BELTS OVER PULLEYS.

- Park the tractor on a smooth, level surface such as a concrete floor. Disengage the PTO, engage the parking brake, turn off the engine, and remove the ignition key.
- Using a 1/2" breaker bar, place the square end in the square hole located in the end of the idler arm (A, Figure 56). Carefully rotate the breaker bar counter-clockwise, which will relieve the tension on the belt exerted from the idler arm.
- Slide the drive belt over the edge of the stationary idler pulley (B). Carefully release the tension on the breaker bar until the idler arm stops against the center spindle pulley.



Use extreme caution when rotating the idler arm with the breaker bar, due to the increased tension in the spring as the idler arm is being rotated. Injury may result if the breaker bar is prematurely released while the spring is under tension.

- 4. Remove the old belt and replace with a new one. Make sure the V-side of the belt runs in the pulley grooves (Figure 57).
- 5. Install the drive belt on the PTO pulley, the spindle pulleys and all idler pulleys except the stationary pulley (B, Figure 57). Carefully rotate the breaker bar counter-clockwise and install the belt on the stationary idler pulley (B). Carefully release the tension on the breaker bar.
- 6. Run the mower under no-load condition for about 5 minutes to break-in the new belt.

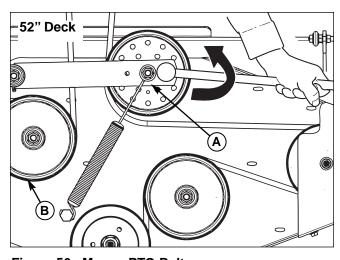


Figure 56. Mower PTO Belt A. Idler Arm

**B. Stationary Idler Pulley** 

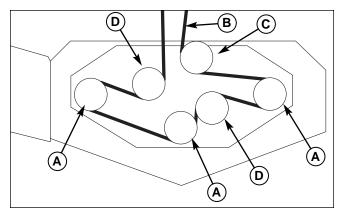


Figure 57. Mower PTO Belt Routing

- A. Spindle Pulley
- **B. PTO Drive Belt**
- C. Spring-loaded Idler Pulley
- D. Stationary Idler Pulley

### **BATTERY SERVICE**



Keep open flames and sparks away from the battery; the gasses coming from it are highly explosive. Ventilate the battery well during charging.

### **Checking Battery Voltage**

A voltmeter can be used to determine condition of battery. When engine is off, the voltmeter shows battery voltage, which should be 12 volts. When engine is running, the voltmeter shows voltage of charging circuit which normally is 13 to 14 volts.

A dead battery or one too weak to start the engine may not mean the battery needs to be replaced. For example, it may mean that the alternator is not charging the battery properly. If there is any doubt about the cause of the problem, see your dealer. If you need to replace the battery, follow the steps under Cleaning the Battery & Cables in the Regular Maintenance Section.

# Charging a Completely Discharged Battery

- Be aware of all the safety precautions you should observe during the charging operation. If you are unfamiliar with the use of a battery charger and hydrometer, have the battery serviced by your dealer.
- Add distilled water sufficient to cover the plate (fill to the proper level near the end of the charge). If the battery is extremely cold, allow it to warm before adding water because the water level will rise as it warms. Also, an extremely cold battery will not accept a normal charge until it becomes warm.
- 3. Always unplug or turn the charger off before attaching or removing the clamp connections.
- Carefully attach the clamps to the battery in proper polarity (usually red to [+] positive and black to [-] negative).
- While charging, periodically measure the temperature of the electrolyte. If the temperature exceeds 125° F (51.6° C), or if violent gassing or spewing of electrolyte occurs, the charging rate must be reduced or temporarily halted to prevent battery damage.
- 6. Charge the battery until fully charged (until the specific gravity of the electrolyte is 1.250 or higher and the electrolyte temperature is at least 60° F). The best method of making certain a battery is fully charged, but not over charged, is to measure

the specific gravity of a cell once per hour. The battery is fully charged when the cells are gassing freely at low charging rate and less than 0.003 change in specific gravity occurs over a three hour period.

# Jump Starting With Auxiliary (Booster) Battery

Jump starting is not recommended. However, if it must be done, follow these directions. Both booster and dis-charged batteries should be treated carefully when using jumper cables. Follow the steps below EXACTLY, being careful not to cause sparks. Refer to Figure 58.

- 1. Both batteries must be of the same voltage.
- Position the vehicle with the booster battery adjacent to the vehicle with the discharged battery so that booster cables can be connected easily to the batteries in both vehicles. Make certain vehicles do not touch each other.
- Wear safety glasses and shield eyes and face from batteries at all times. Be sure vent caps are tight. Place damp cloth over vent caps on both batteries.
- 4. Connect positive (+) cable to positive post of discharged battery (wired to starter or solenoid).
- Connect the other end of same cable to same post marked positive (+) on booster battery.
- 6. Connect the second cable negative (-) to other post of booster battery.
- Make final connection on engine block of stalled vehicle away from battery. Do not lean over batteries.
- Start the engine of the vehicle with the booster battery. Wait a few minutes, then attempt to start the engine of the vehicle with the discharged battery.
- If the vehicle does not start after cranking for thirty seconds, STOP PROCEDURE. More than thirty seconds seldom starts the engine unless some mechanical adjustment is made.
- 10. After starting, allow the engine to return to idle speed. Remove the cable connection at the engine or frame. Then remove the other end of the same cable from the booster battery.
- 11. Remove the other cable by disconnecting at the discharged battery first and then disconnect the opposite end from the booster battery.
- 12. Discard the damp cloths that were placed over the battery vent caps.

50 www.ferrisindustries.com

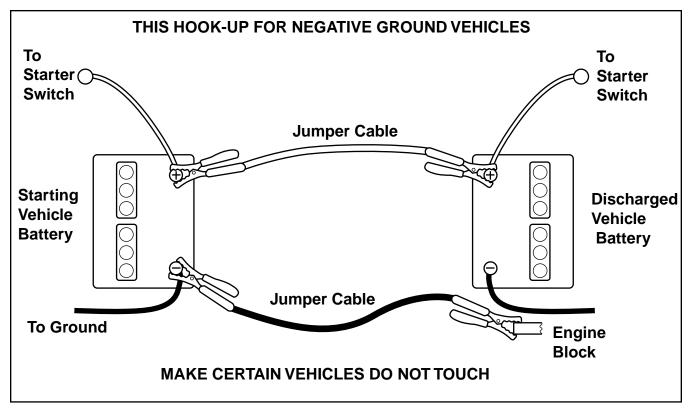


Figure 58. Jump Starting

# **WARNING**

Any procedure other than the preceding could result in:

- (1) personal injury caused by electrolyte squirting out the battery vents,
- (2) personal injury or property damage due to battery explosion,
- (3) damage to the charging system of the booster vehicle or of the immobilized vehicle.

Do not attempt to jump start a vehicle having a frozen battery because the battery may rupture or explode. If a frozen battery is suspected, examine all fill vents on the battery. If ice can be seen or if the electrolyte fluid cannot be seen, do not attempt to start with jumper cables as long as the battery remains frozen.

# WARNING

For your personal safety, use extreme care when jump starting. Never expose battery to open flame or electric spark – battery action generates hydrogen gas which is flammable and explosive. Do not allow battery acid to contact skin, eyes, fabrics, or painted surfaces. Batteries contain a sulfuric acid solution which can cause serious personal injury or property damage.

When removing or installing battery cables, disconnect the negative cable FIRST and reconnect it LAST. If not done in this order, the positive terminal can be shorted to the frame by a tool.

To avoid engine damage, do not disconnect battery while engine is running. Be sure terminal connections are tight before starting.

NOTE: Specifications are correct at time of printing and are subject to change without notice.

### **ENGINE:**

### **Yanmar**

 Make
 Yanmar

 Model
 2V750V

 Horsepower
 20 @ 3200 rpm

 Displacement
 45.7 Cu. in (750 cc)

Electrical System 12 Volt, 20 amp. Alternator, Battery: 340

CCA

**Oil Capacity** 2.4 US pt. (2.27 L)

### **CHASSIS:**

Fuel Tank Capacity: 11 Gallons (41.6 L) Total Rear Wheels Tire Size: 22 x 10.00 -10 (52" Deck)

Tire Size: 22 x 11.00 -10 (61" Deck) Inflation Pressure: 15 psi (1,03 bar)

Front Wheels Tire Size: 13 x 5.00 - 6

Inflation Pressure: 25 psi (1,72 bar)

### **TRANSMISSIONS:**

### HydroGear PG-3H / HGM-12E 3131

Type Pump and Wheel Motor
Hydraulic Fluid Mobil 1™ 15W-50 synthetic oil or

Castrol Syntec<sup>™</sup> 5W-50 oil

59" (150 cm) with Roll Bar Down

**Speeds** Forward: 0-10 MPH (0-16.09 km/h) @ **3400 rpm** Reverse: 0-5 MPH (0-8.05 km/h)

Continuous Torque 222 ft. lbs. (301 N.m.)

Output

Maximum Weight 750 lbs. (340 Kg)

on Axle

### **DIMENSIONS:**

Overall Length 81" (208 cm)

Overall Width 61" (154 cm) - 48" Deck 65" (165 cm) - 52" Deck Height 70" (178 cm) with Roll Bar Up

Weight (apx..)

With 48" Mower Deck 1090 lbs. (494 kg)
With 52" Mower Deck 1130 lbs. (513 kg)

### **Engine Power Rating Information**

The gross power rating labels for individual gas engine models meet or exceed SAE (Society of Automotive Engineers) code J1940 (Small Engine Power & Torque Rating Procedure) and rating performance has been obtained and corrected in accordance with SAE J1995 (Revision 2002-05). Actual gross engine power may be lower and is affected by, but not limited to, ambient operating conditions and engine to engine variability. Given both the wide array of products on which engines are placed, and the variety of environmental issues applicable to operating the equipment, the gas engine will not develop the rated gross power when used in a given piece of power equipment (actual "on-site" or net horsepower). This difference is due to a variety of factors including, but not limited to, accessories (air cleaner, exhaust, charging, cooling, carburetor, fuel pump, etc.), application limitations, ambient operating conditions (temperature, humidity, altitude), and engine to engine variability.

### Ferris Industries - a division of Simplicity Manufacturing Inc. **Owner's Limited Warranty Information**

(Effective 04/28/2004)

Thank you for purchasing Ferris commercial mowing equipment. Please take a few minutes to read this limited warranty information. It contains all the information you will need to have your Ferris mower repaired in the unlikely event that a breakdown covered by this limited warranty should occur.

Owner's Responsibilities - As a condition to our obligations under this limited warranty, you shall have read the operator's manual and you shall have completed and submitted to Ferris, within 20 days from the date of purchase, the Ferris Product Registration. You must properly service and maintain your Ferris product as described in the operator's manual. Such routine maintenance, whether performed by a dealer or by you, is at your expense. The Ferris equipment, including any defective part covered by this limited warranty, must be returned to an authorized Ferris dealer within the warranty period for warranty service. This limited warranty extends only to equipment operated under normal conditions and in accordance with Ferris' instruc-

**Warranty Start Date** - The limited warranty coverage begins on the day you buy your new Ferris commercial mowing equipment. An authorized Ferris dealer will assist you in filling out a Ferris Product Registration with specific information for the model you purchase and your personal information, which must be returned to Ferris.

**Limited Warranty** - The limited warranty, set forth below, is a written guarantee by Ferris, during the warranty period, to repair or replace parts which have a substantial defect in materials or workmanship. The warranty is "limited" because it is for a specified period of time, applies to the original purchaser only, and is subject to other restrictions.

### FERRIS LIMITED WARRANTY

Ferris Industries (Ferris) warrants, in accordance with the provisions below, to the original purchaser only, for the periods described below that the commercial mower shall be free from substantial defects in material or workmanship under normal use and service. If you wish to file a claim under this limited warranty, you must provide prompt notice of your claim to an authorized Ferris dealer during the warranty period. Ferris' obligation under this limited warranty is, at Ferris' option, to repair or replace any part or parts of the mower, which, in the judgment of Ferris, are found to be defective and covered by this limited warranty. An authorized Ferris dealer will repair or replace the defective part or parts, at the dealer's place of business, at no charge for the labor or parts. This limited warranty applies only to mowers sold in the United States and Canada and is subject to the following limi-

**Covered Parts Warranty Period** 

All Mowers 2-years (24 months) from date of retail purchase by the original

purchaser for parts & labor (90 days for rental mowers)

(Except as noted below\*)

\*Belts, Tires, Brake Pads And Hoses, Battery, Blades 90 days from date of retail purchase by the original purchaser

1 year from date of retail purchase by the original purchaser \*Attachments

\*Engine

If the engine manufacturer provides any warranty on the mower's engine, Ferris will assign that warranty to the original purchaser of the mower if such assignment is reasonably practicable. Please refer to the engine manufacturer's warranty statement, if any, that is included in the owner's packet. We are not authorized to handle warranty adjustments or repairs on engines. Ferris offers NO WARRANTY on mower engines. Ferris does not quarantee or represent that any engine manufacturer will comply with the terms of its warranty.

### Items and Conditions Not Covered

- Items and Conditions Not Covered
  This warranty does not cover, and Ferris makes NO WARRANTY regarding, the following:
  Mowers or their parts if a complete and accurate Ferris Product Registration has not been received by Ferris.
  Loss or damage to person or property other than that expressly covered by the terms of this limited warranty.
  Pickup and delivery charges and risk of loss or damage in transit to and from any authorized Ferris dealer.
  Any damage or deterioration due to normal use, wear and tear, or environmental or natural elements, or exposure.
  Cost of regular maintenance service or parts, such as but not limited to, filters, fuel, lubricants, tune-up parts, and adjustments.
  Claims arising due to failure to follow Ferris' written instructions, or improper storage or maintenance.
  Any repairs necessary due to use of parts, accessories or supplies, including gasoline, oil or lubricants, incompatible with the mowing equipment, or other than as recommended in the operator's manual or other written operational instructions provided by Ferris or other than as recommended in the operator's manual or other written operational instructions provided by Ferris.
  - Use of non-Ferris approved parts or accessories.
  - Any overtime or other extraordinary repair charges or charges relating to repairs or replacements.
  - Rental of like or similar replacement equipment during the period of any warranty, repair or replacement work.
  - Loss of revenue, time or use of the mowing equipment.
  - Travel, telephone or other communication charges.
  - Damage from continued use of defective moving equipment.
  - Freight charges on replacement parts.
  - Any mowing equipment or part which, in the judgment of Ferris, has been altered or tampered with in any way or has been subjected to misuse, abuse, abnormal usage, unauthorized repair, neglect or accident, damage in transit, or has had the serial numbers altered, effaced or removed. Any equipment, part or item not mentioned under "Covered Parts," above.

Ferris is continually striving to improve its products, and therefore reserves the right to make improvements or changes without incurring any obligation to make changes or additions to products sold previously. Any oral or written description of Ferris products is for the sole purpose of identifying the products and shall not be construed as an express warranty. No warranty claim shall give rise to a right for the purchaser to cancel or rescind any sale. No person is authorized to make any warranty or assume for Ferris any liability not strictly in accordance with this limited warranty. Any assistance Ferris provides to or procures for the purchaser outside the terms, limitations or exclusions of this limited warranty will not constitute a waiver of the terms, limitations or exclusions of this limited warranty, nor will such assistance extend or revive the limited warranty. Ferris will not reimburse the purchaser for any expenses incurred by the purchaser in repairing, correcting or replacing any defective products except for those incurred with Ferris' prior written permission and in accordance with this limited warranty.

Ferris' sole and exclusive liability with respect to this limited warranty, and the purchaser's exclusive remedy, shall be repair or replacement as set forth herein. All warranty work must be performed by an authorized Ferris dealer using only Ferris approved replacement parts. FERRIS SHALL HAVE NO LIABILITY FOR ANY OTHER COST, LOSS OR DAMAGE, INCLUDING BUT NOT LIMITED TO, ANY INCIDENTAL, COMPENSATORY, INDIRECT, PUNITIVE, SPECIAL OR CONSEQUENTIAL LOSS OR DAMAGE. FERRIS' AGGREGATE LIABILITY WITH RESPECT TO A DEFECTIVE PRODUCT OR PART SHALL BE LIMITED TO AN AMOUNT EQUAL TO THE MONIES PAID BY THE PURCHASER FOR THAT DEFECTIVE PRODUCT OR PART. THIS LIMITED WARRANTY, AND FERRIS' OBLIGATIONS HEREUNDER, ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTY OF MERCHANTABILITY AND THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE. FERRIS SHALL NOT BE LIABLE TO THE PURCHASER, OR TO ANYONE CLAIMING UNDER THE PURCHASER, FOR ANY OTHER OBLIGATIONS OR LIABILITIES, INCLUDING, BUT NOT LIMITED TO, OBLIGATIONS OR LIABILITIES ARISING OUT OF BREACH OF CONTRACT OR WARRANTY, NEGLIGENCE OR OTHER TORT OR ANY THEORY OF STRICT LIABILITY, WITH RESPECT TO FERRIS PRODUCTS OR FERRIS' ACTS OR OMISSIONS OR OTHERWISE.

It is the express wish of the parties that this agreement and any related documents be drafted in English. Il est la volonté expresse des parties que cette convention et tous les documents s'y rattachent soient rédigés en anglais.





# OPERATOR'S MANUAL IS2000Z Diesel Series

**Zero-Turn Riding Mower** 

**Product Specifications:** 

**Common Service Parts:** 

**ENGINE:** 

**Yanmar Diesel** 

Make Yanmar Model 2V750V

Oil Capacity 2.4 US pt. (2.27 L)

**CHASSIS:** 

Fuel Tank Capacity: 11 Gallons (41.6 L) Total Rear Wheels Tire Size: 22 x 10.00 -10

Inflation Pressure: 15 psi (1,03 bar)

Front Wheels Tire Size: 13 x 5.00 - 6

Inflation Pressure: 25 psi (1,72 bar)

BELTS AND BLADES:

**TRACTOR** 

Pump Drive Belt 5100555

**48" MOWER DECK** 

Deck Drive Belt 5100892 Mower Blade 5023270

**52" MOWER DECK** 

Deck Drive Belt 5100893 Mower Blade 5023271